

# JTouch Series 13 Users Guide

Models IN6513, IN7513, IN8613

Regulator Models D011, D012, D013

Please read carefully this manual before operation.

## Safety

Read and understand all safety information, operating instructions, and product labels before operating the equipment. Keep this guide in a safe place for future reference.

The lightening flash with arrow-head symbol, within a triangle, is intended to alert the user to the presence of “dangerous voltage” within the products enclosure that may be sufficient to constitute a risk of electric shock to persons.



The exclamation mark within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions.



To reduce the risk of fire or electric shock, do not expose this product to smoke, rain, dust or moisture!

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

This product is designed and manufactured to operate within defined design limits, and misuse may result in electric shock or fire.

The installation of this product should be completed by a Trained Installer.

## Note

The contents of this document may be updated from time to time due to product version upgrades or other reasons.

Unless otherwise agreed, this document is provided as a guide only, and all statements, information, and recommendations in this document are not warranties of any kind, express or implied.

# Contents

<b>Hardware Details</b>	Hardware Details	1
<b>HomePage</b>	Homepage	3
	Applications	4
	White Board	5
	Side menu	7
	App List Signal	9
	source	10
	Annotation	11
	All shortcuts	12
	Floating ball	13
	Multi Display	14
Recent Apps	15	
<b>Settings</b>	Advanced Features	16
	Environmental sensors switch	17
	WiFi	18
	Wired network	19
	WiFi hotspot	20
	NFC	21
<b>Others</b>	Camera	24
	Remote control	25


# Hardware Details

## 1. Front View



- 1. TYPE-C IN Port
- 2. Public USB 3.0 Port
- 3. Public USB 3.0 Port
- 4. Public USB 3.0 Port
- 5. Touch USB-B Port
- 6. HDMI IN 1 Port
- 7. Power button


## 2. Right side View

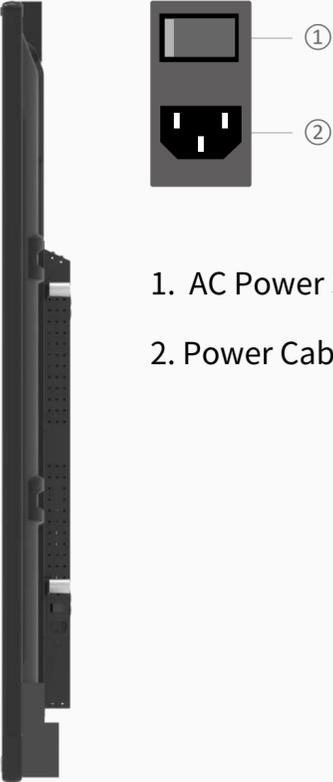

- 1. AC Power Switch
- 2. Power Cable Input


# Hardware Details

## 3. Left Side View

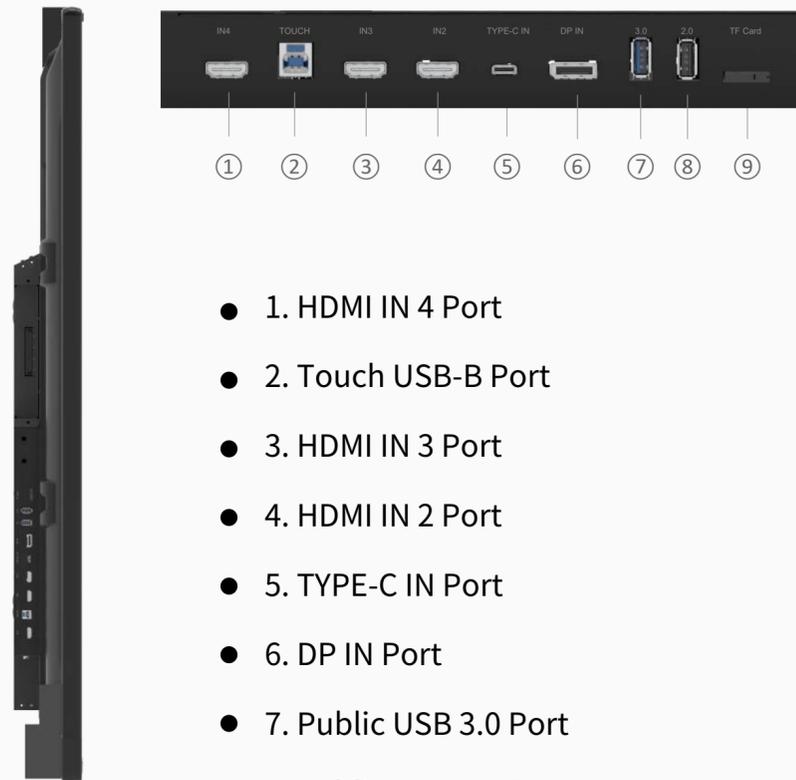

- 1. HDMI IN 4 Port
- 2. Touch USB-B Port
- 3. HDMI IN 3 Port
- 4. HDMI IN 2 Port
- 5. TYPE-C IN Port
- 6. DP IN Port
- 7. Public USB 3.0 Port
- 8. Public USB 2.0 Port
- 9. Micro-SD (TF) card slot

## 4. Bottom View

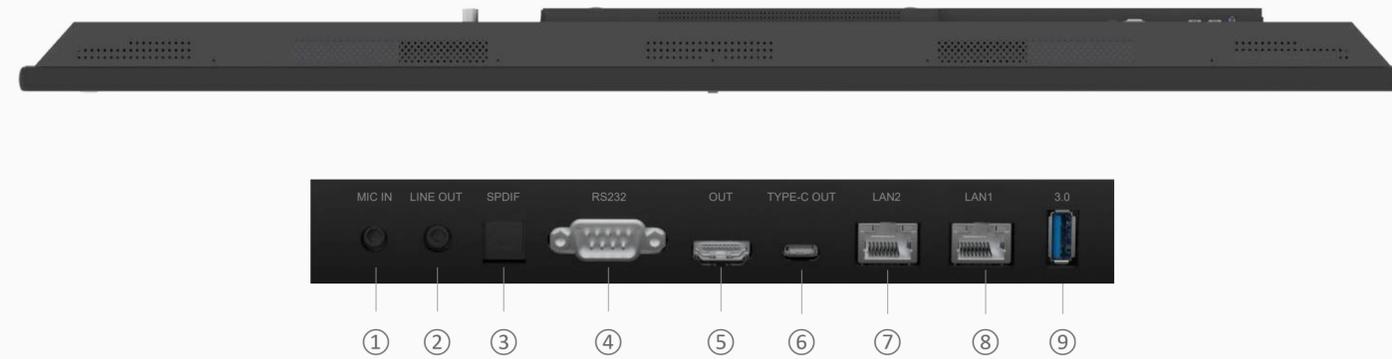


- 1. MIC IN Port
- 2. LINE OUT Port
- 3. SPDIF OUT Port
- 4. RS232 Port
- 5. HDMI OUT Port
- 6. TYPE-C OUT Port
- 7. LAN2 Port
- 8. LAN1 Port
- 9. Android USB3.0 Port



## Homepage

Slide up from the bottom of the screen to bring up the Apps list.

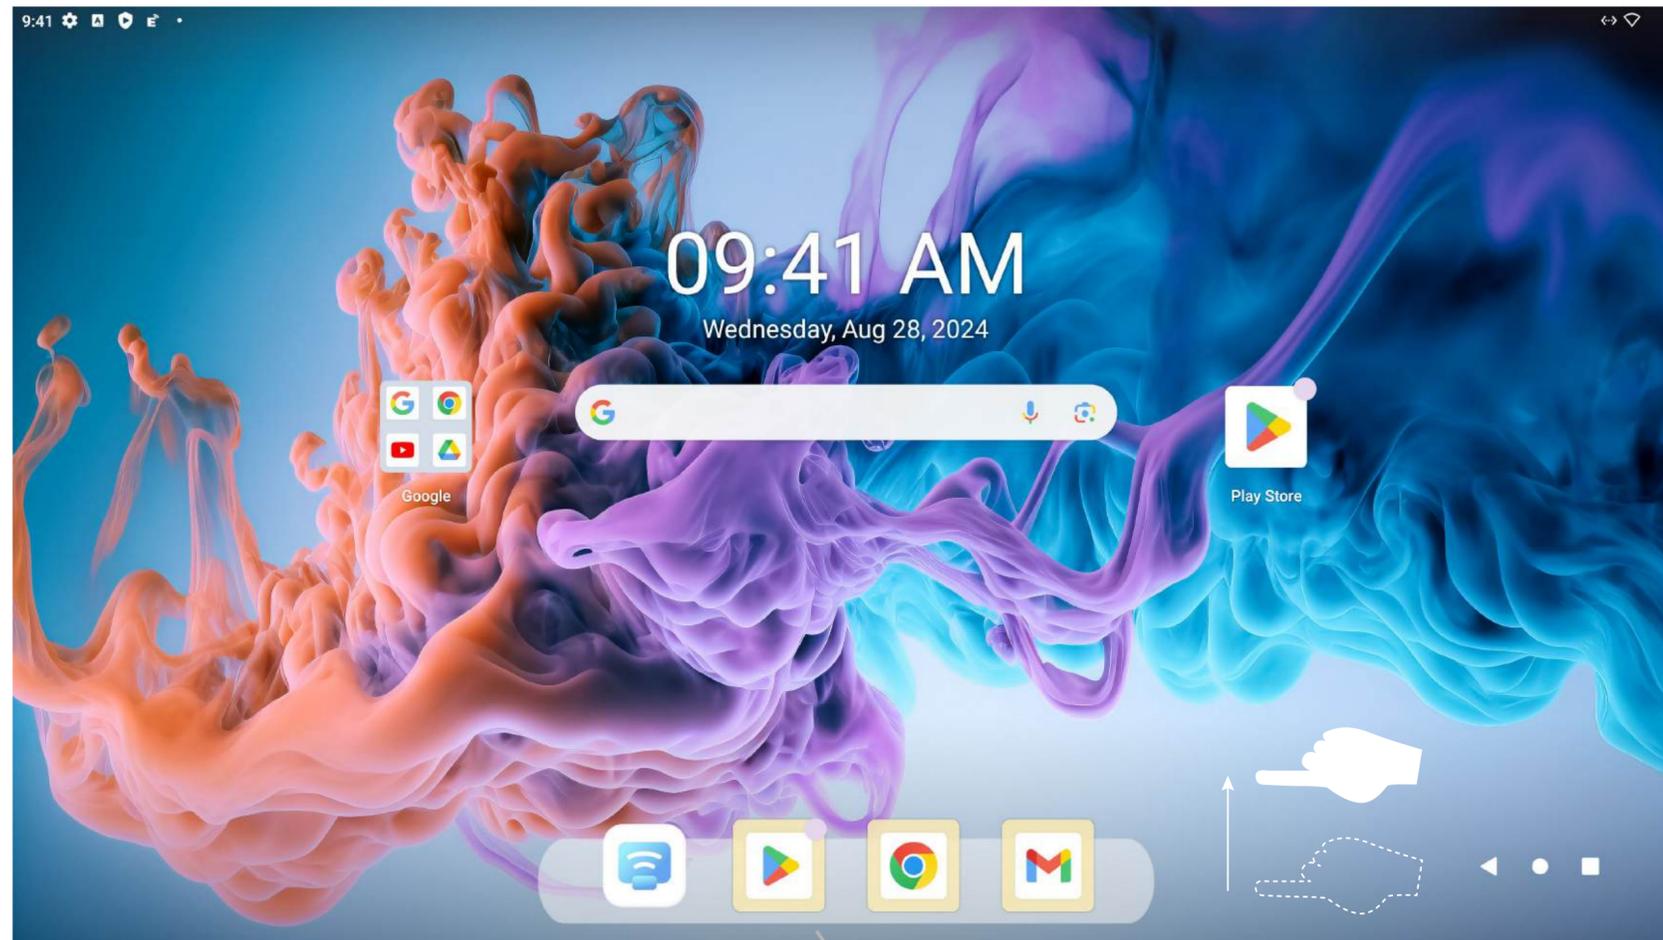

Here shows the recently opened applications.



## Cast


Tip: the device needs to be connected to the hotspot sent by the Intelligent conference board

Project the content on from mobile devices to touch screen, including mobile phones, tablet and laptops, support Android/IOS/Windows/Mac OS.



## Applications

Here are all the APKs of the device.

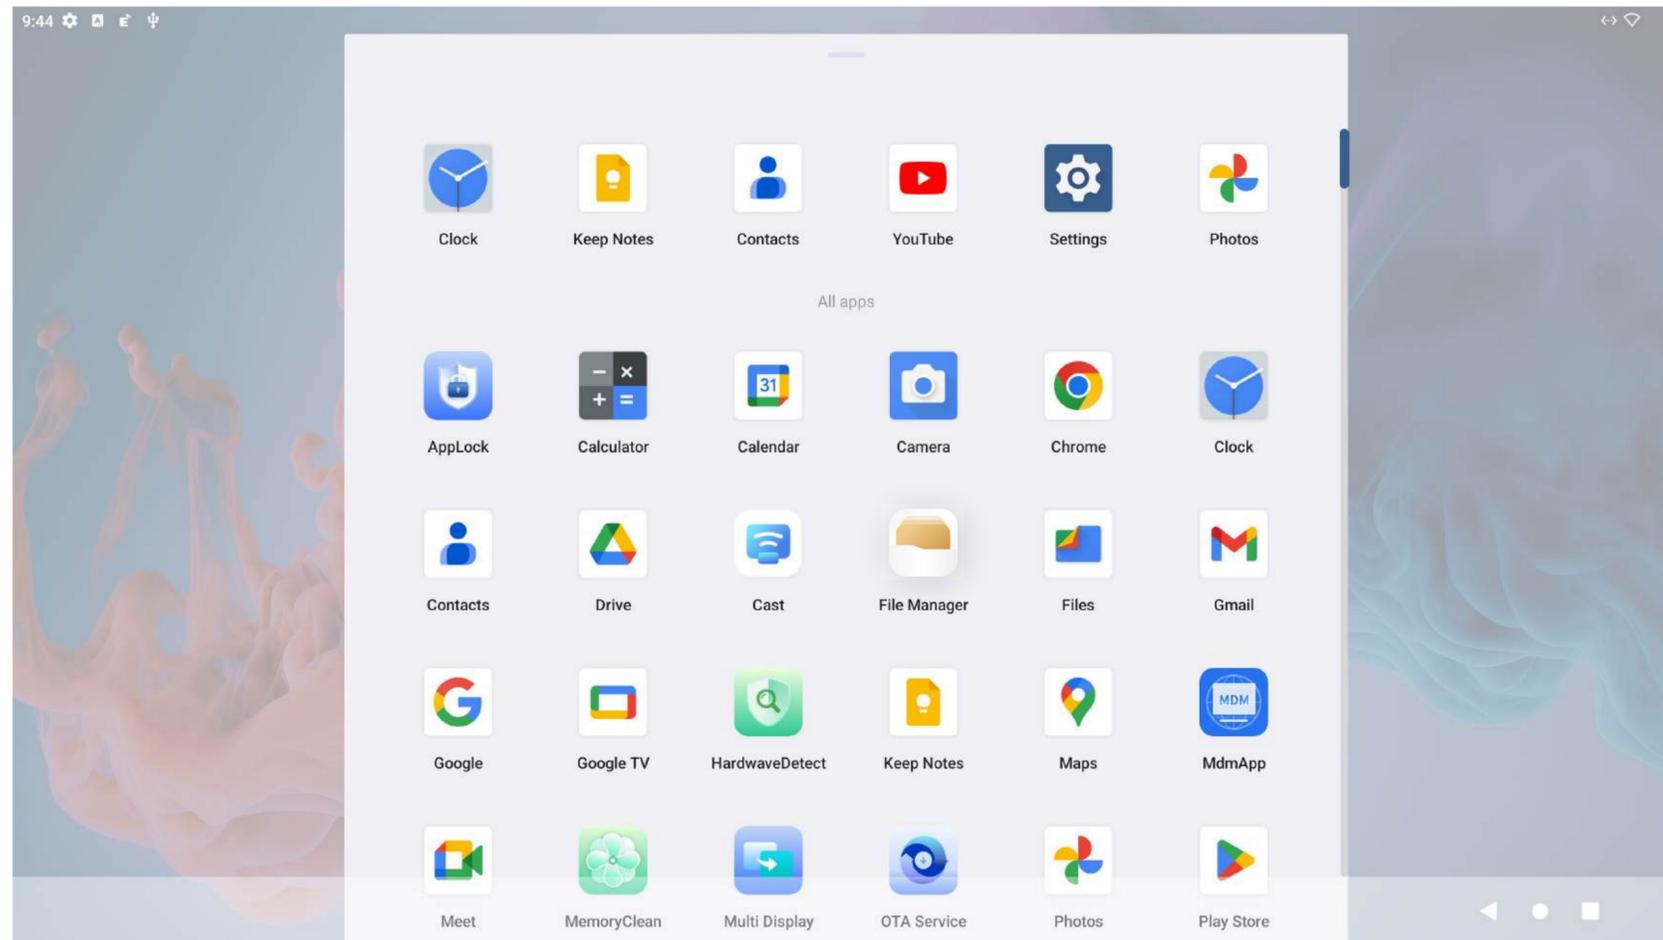

### File Manager

Quick access to file manager to find saved files.




### White Board

Fast access to whiteboard software for writing.



## White Board


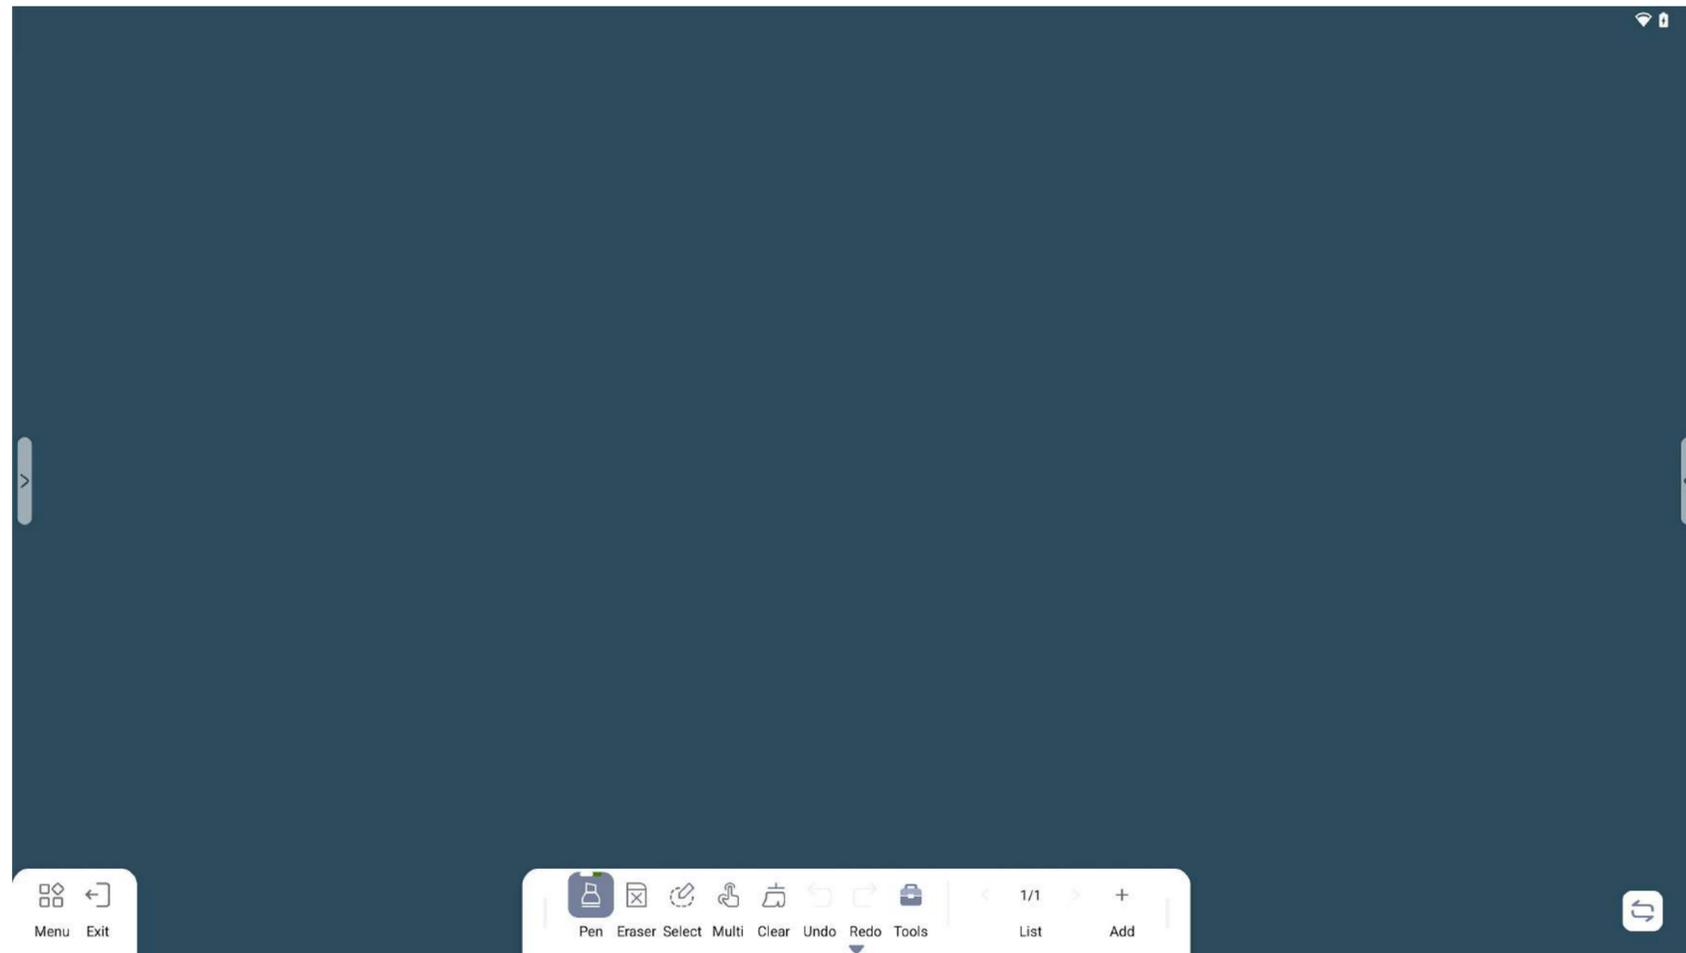


- ①  Open the whiteboard menu
- ②  Close the current application
- ③  Drawing tool
- ④  Selection of erasure mode and plate erasure
- ⑤  Zoom in, zoom out, and drag the selected area
- ⑥  Switch between Multi writing and Single writing
- ⑦  Click to clear screen
- ⑧  Return to the previous step
- ⑨  Return to the next step
- ⑩  Including Shape, Text, Form, Mind, Puzzle, split screen, Split+, Web browser, Web picture, Web video, Spotlight, Timer, Current and Global sticky tools
- ⑪  Add page
- ⑫  Bottom left and right menu switching

# Menu

- Open
- Save
- Share by QR
- Background
- Email
- Collaborative mode
- Annotation
- More
- About

# Pages

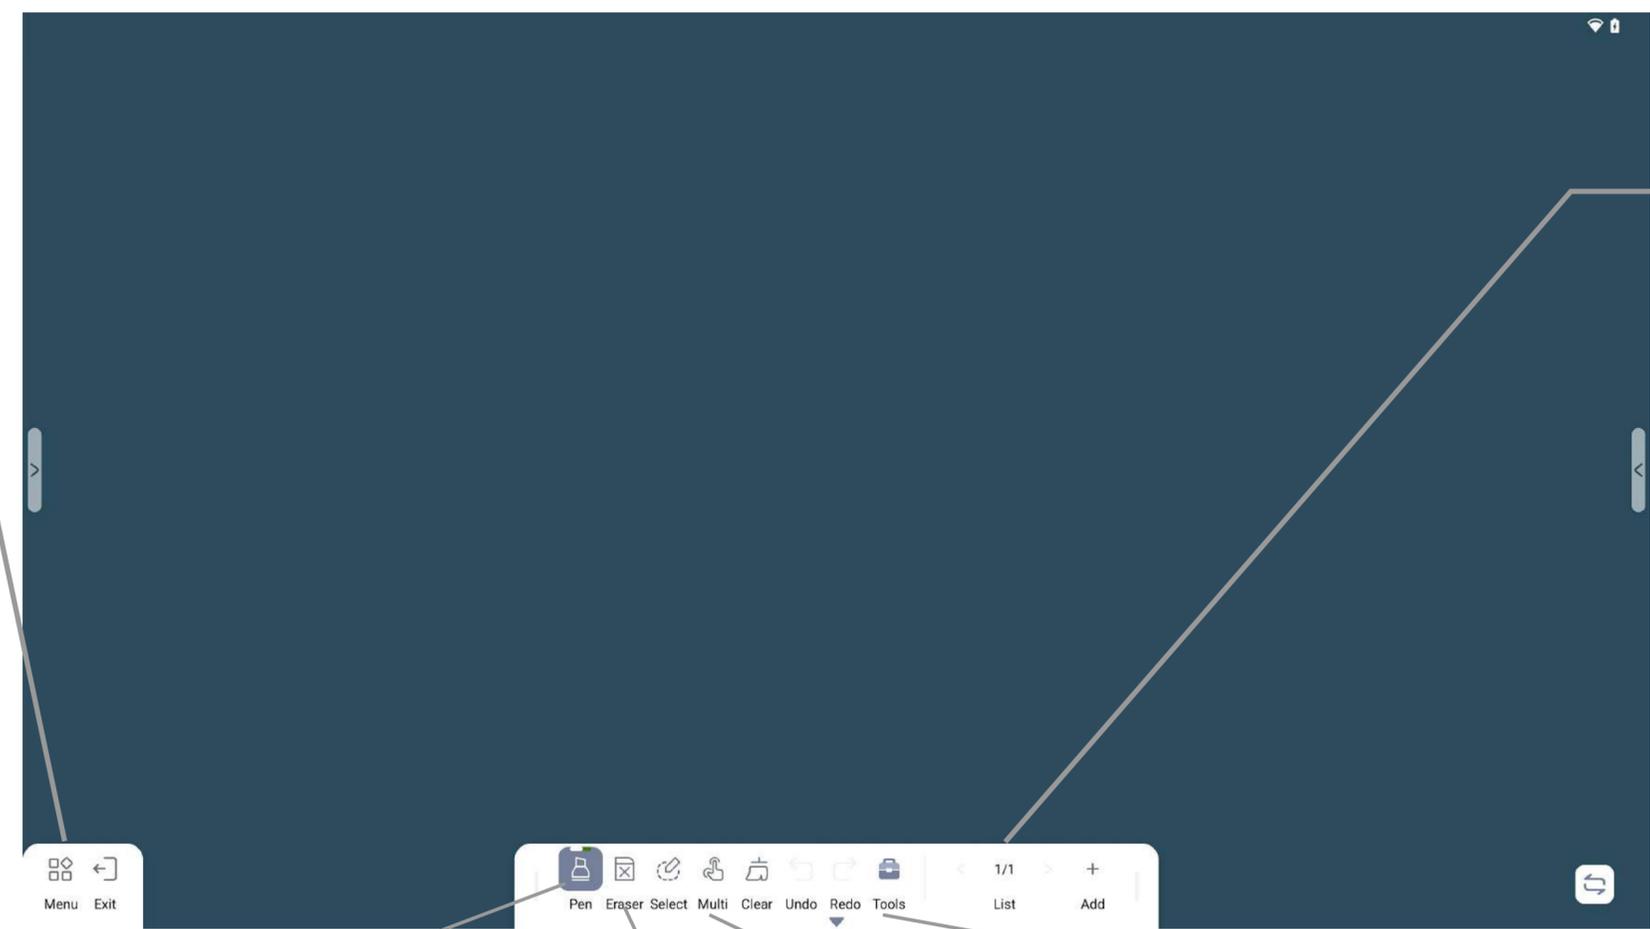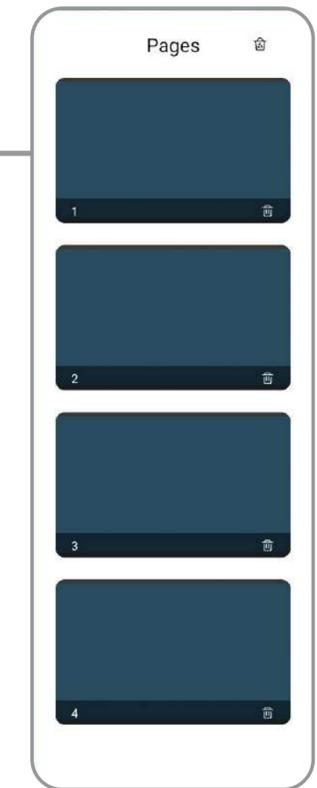

# Pen

Shape  Handwri

# Eraser

# Single

Switch between each other

# Multi



# Tools



## Side menu


This side menu is hidden by default. Turn on the Side menu switch as below:

“Settings—Display—Turn on the Side menu switch.” Side menu can be displayed on the homepage.

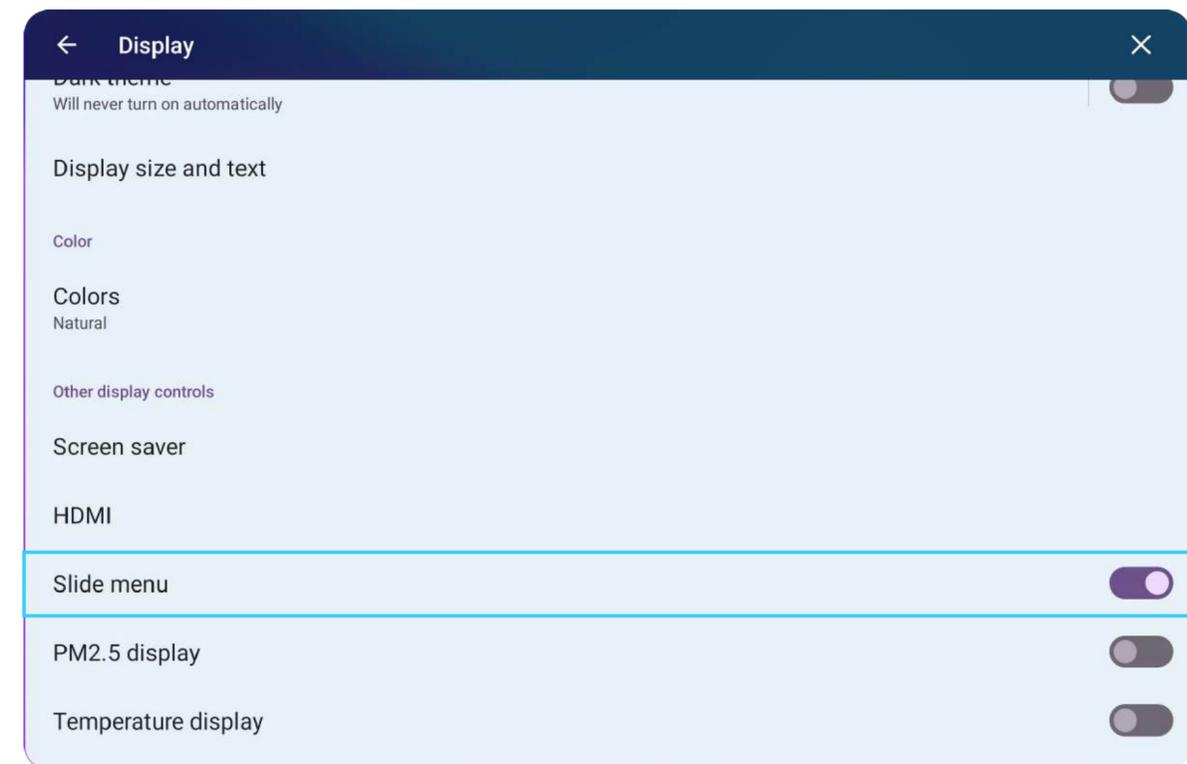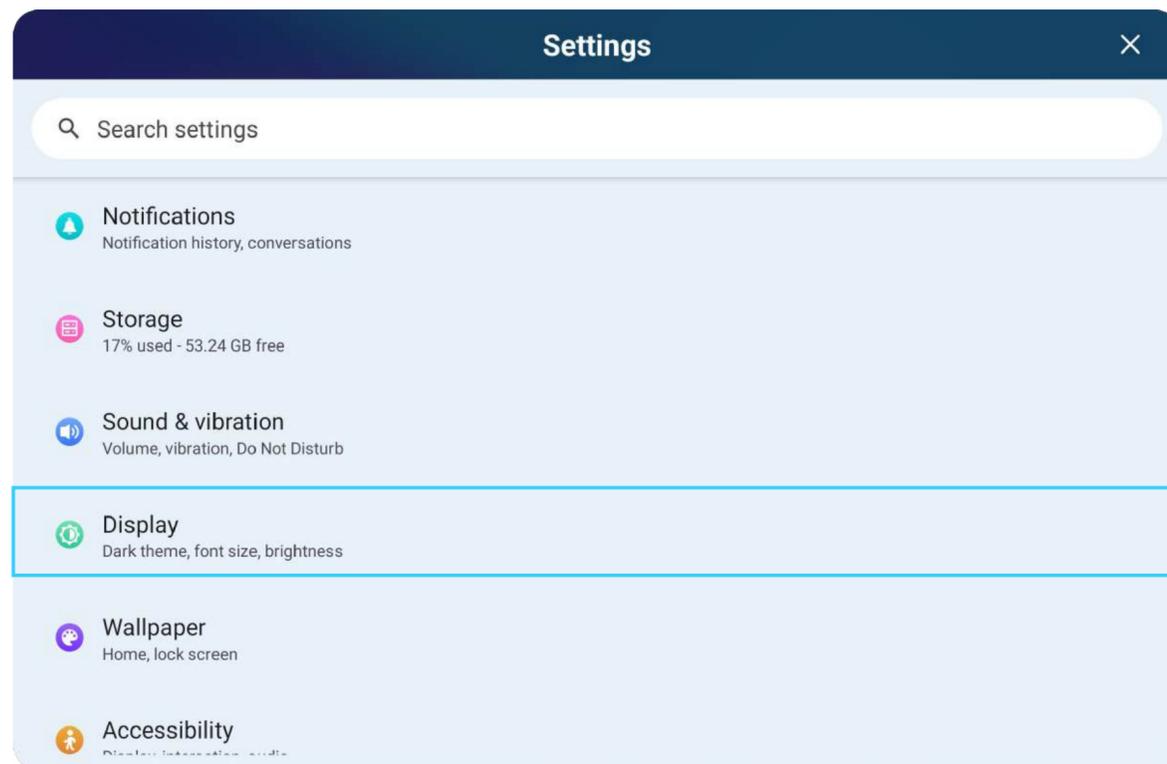

## < Side menu



Touch the icon on the left or right side of the home page, open Side menu.

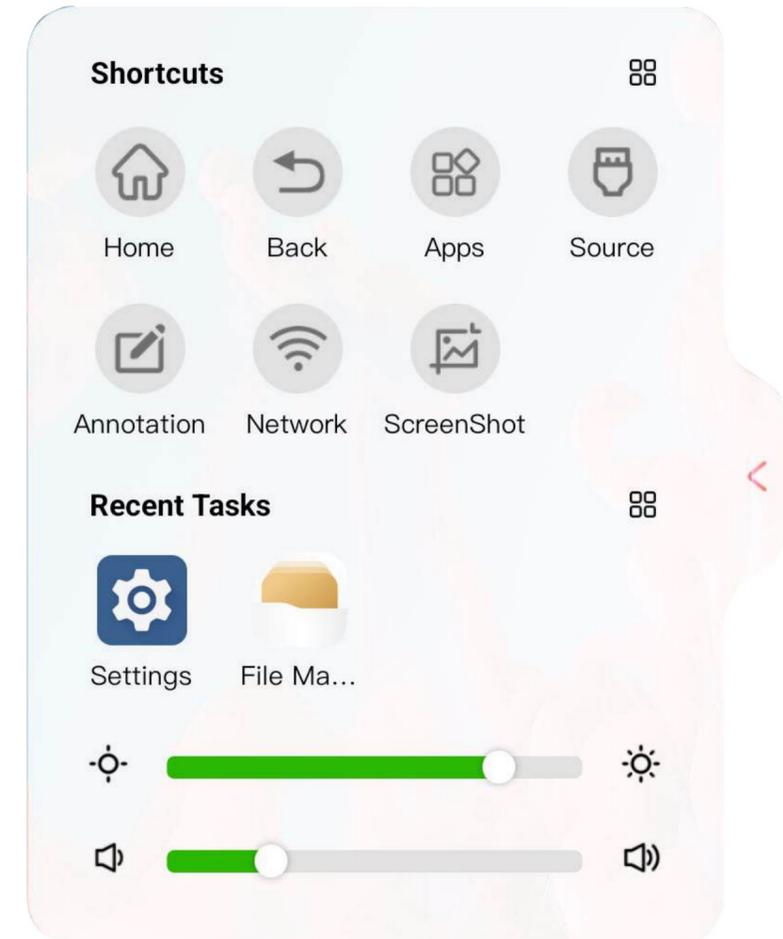



## App List



Find more applications quickly.

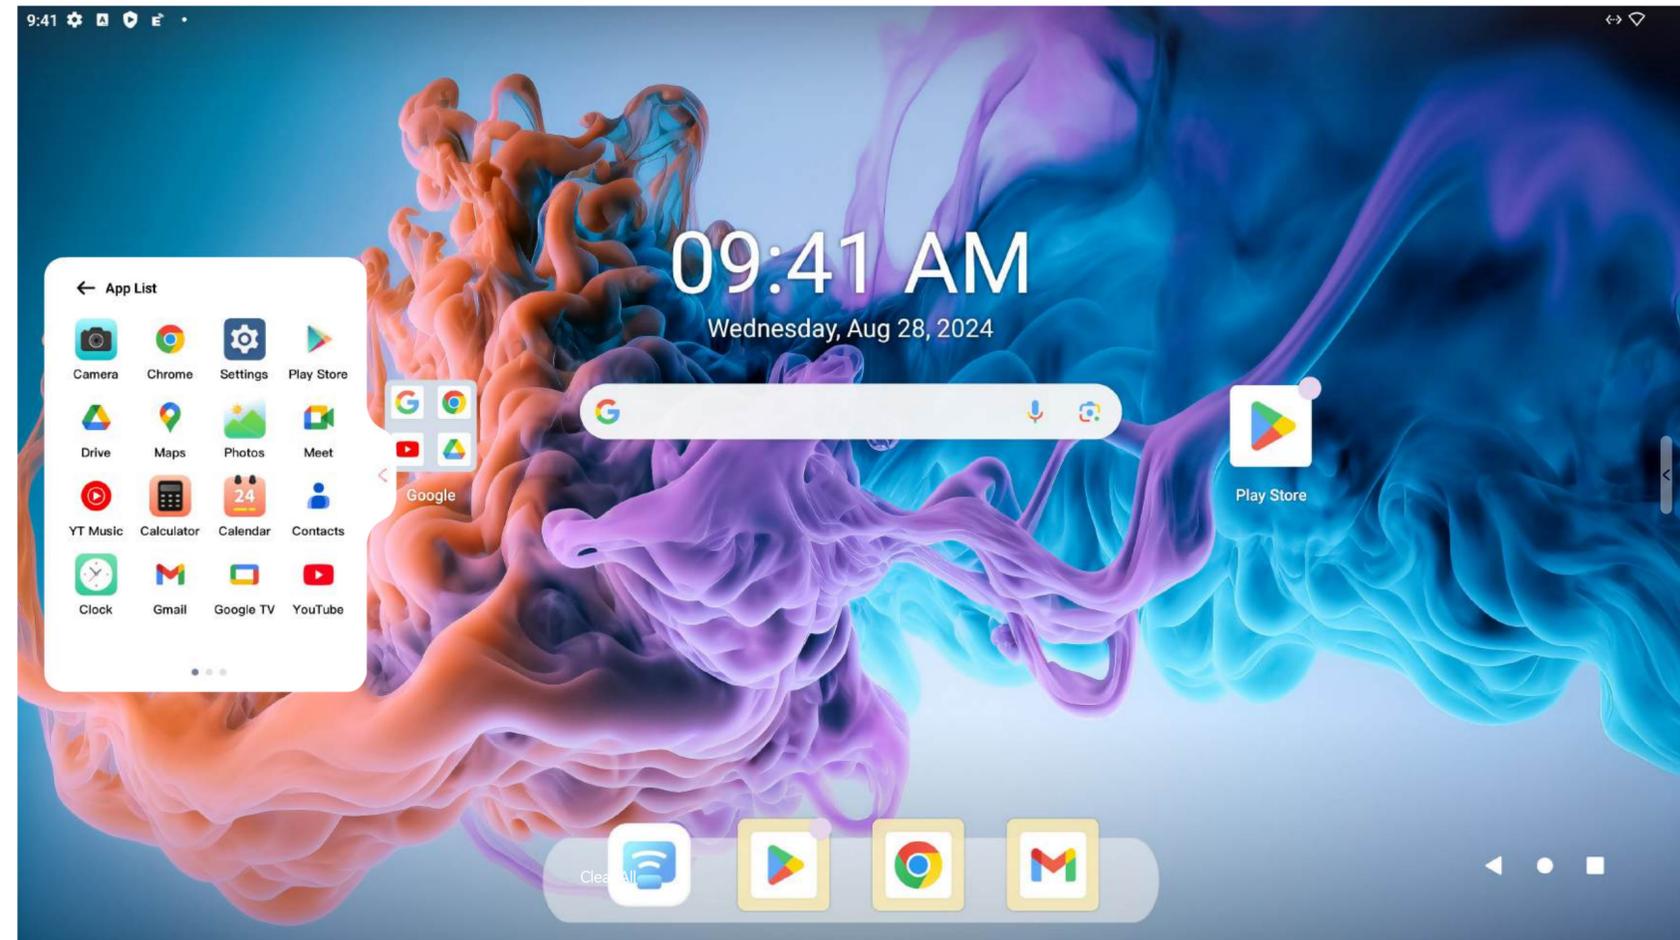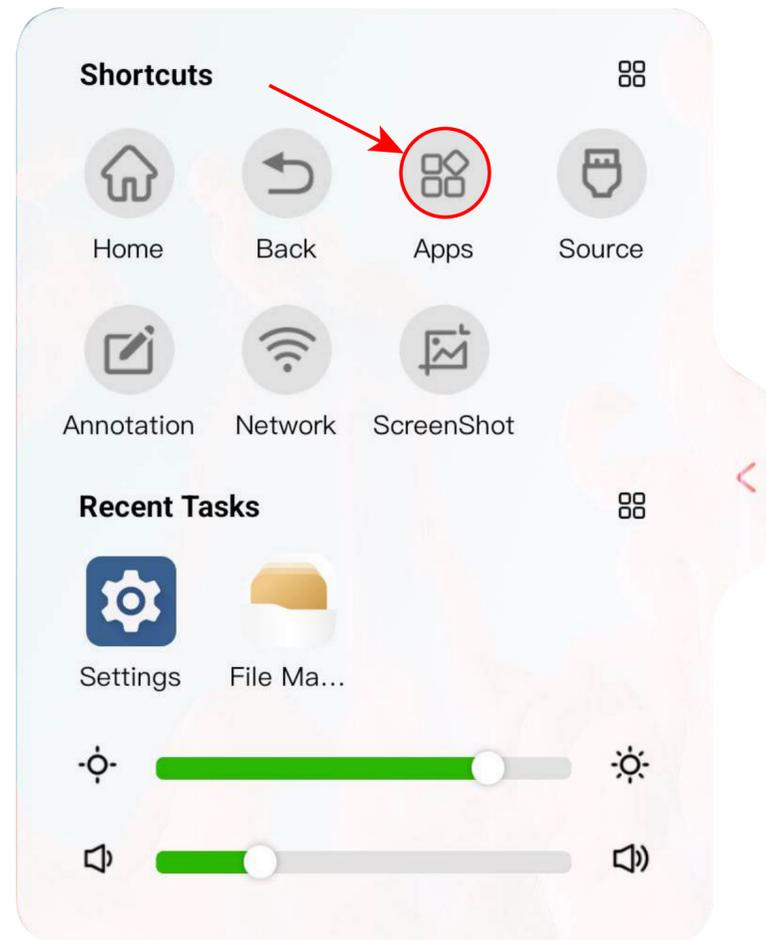



## Signal source



Select the corresponding signal channel.

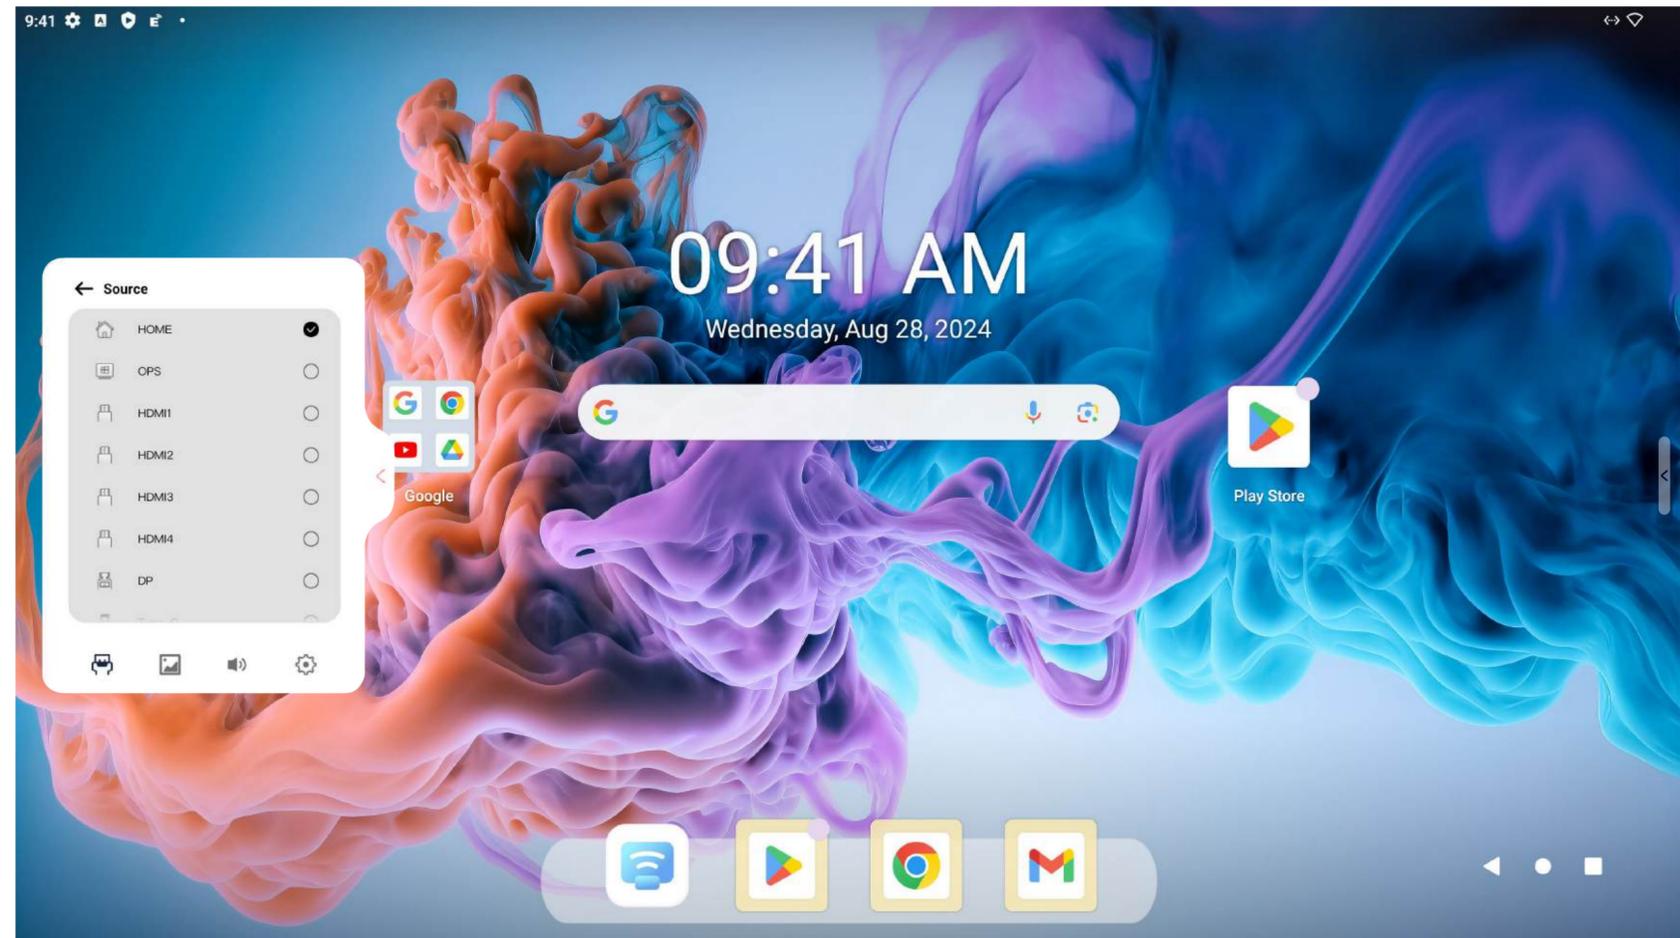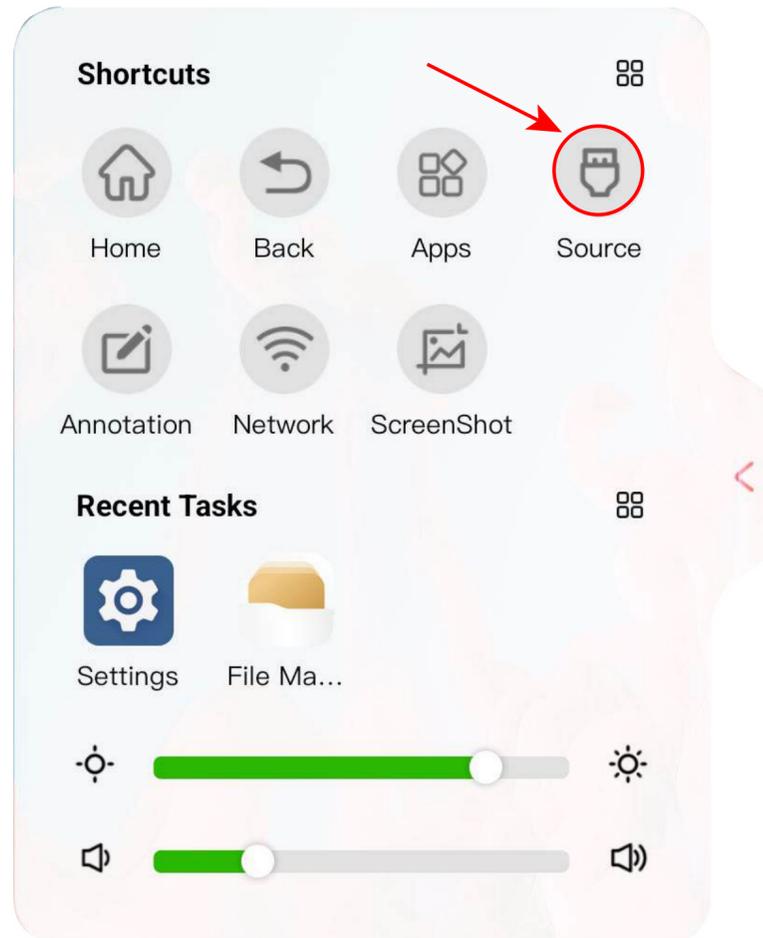



## Annotation



You can write freely on the screen.

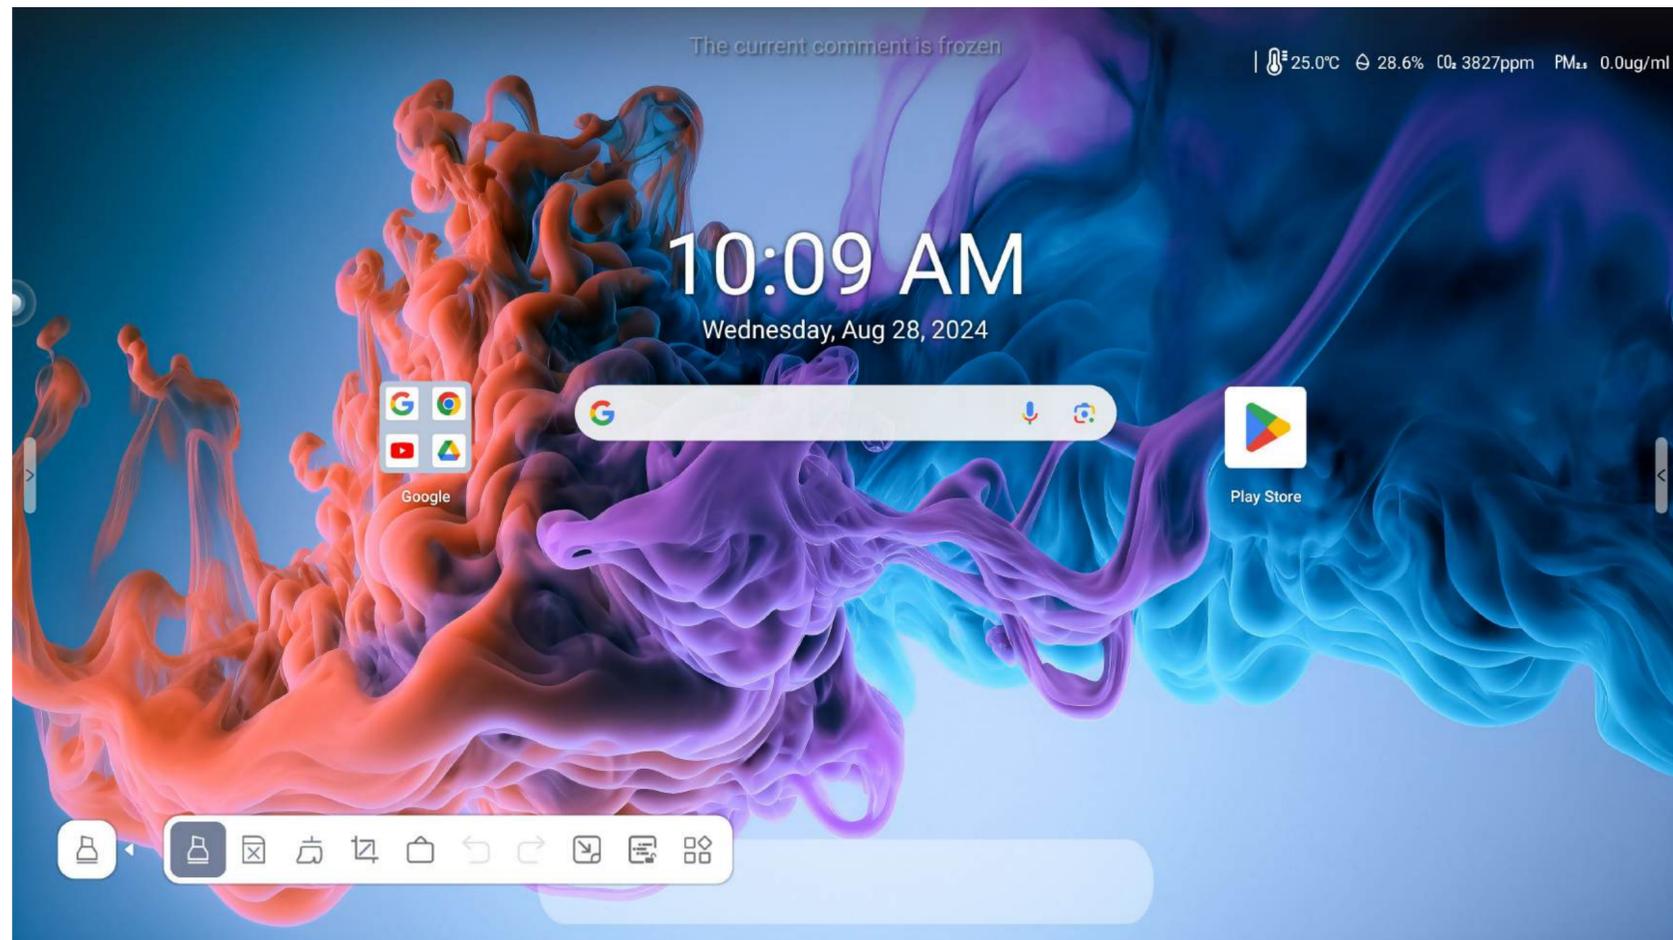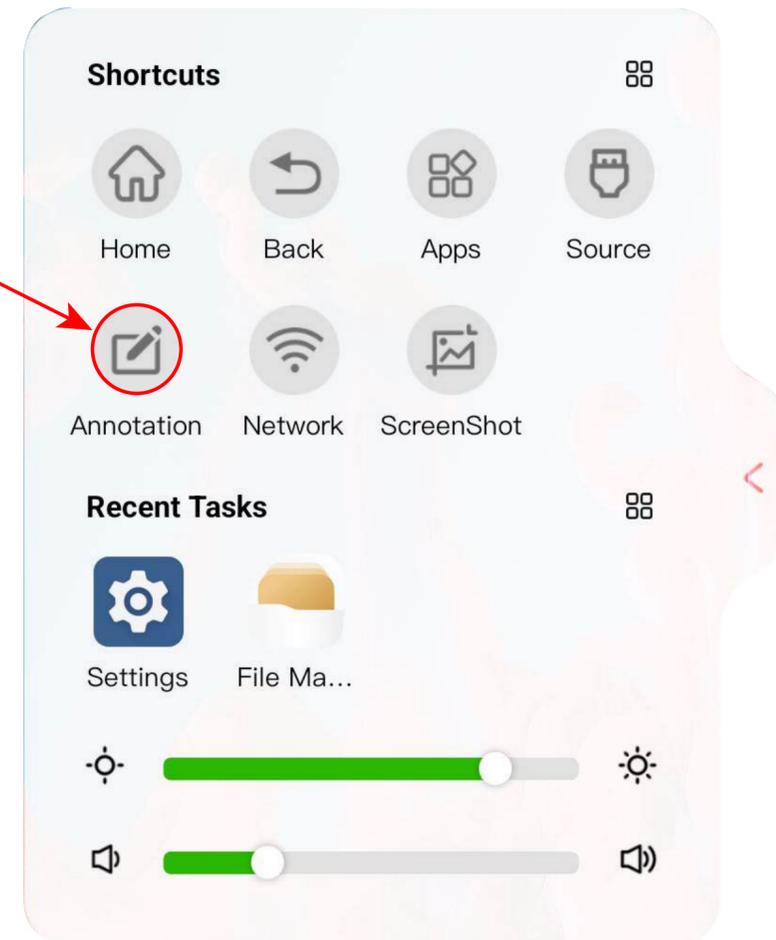



## All shortcuts


The collection of tools shortcuts.

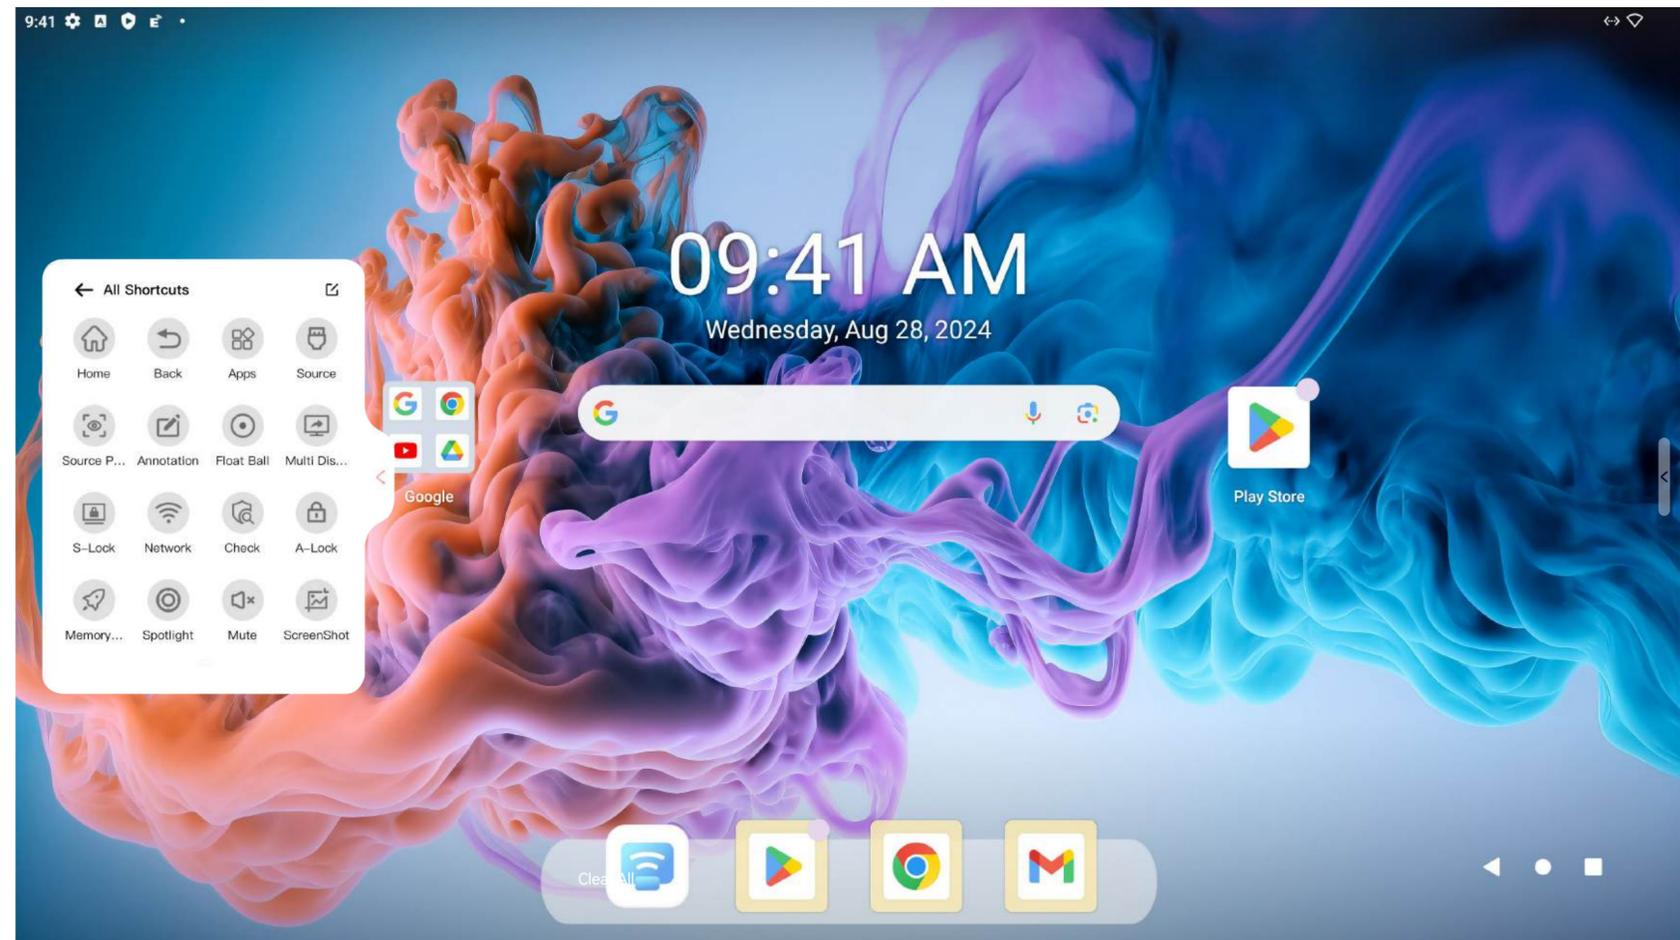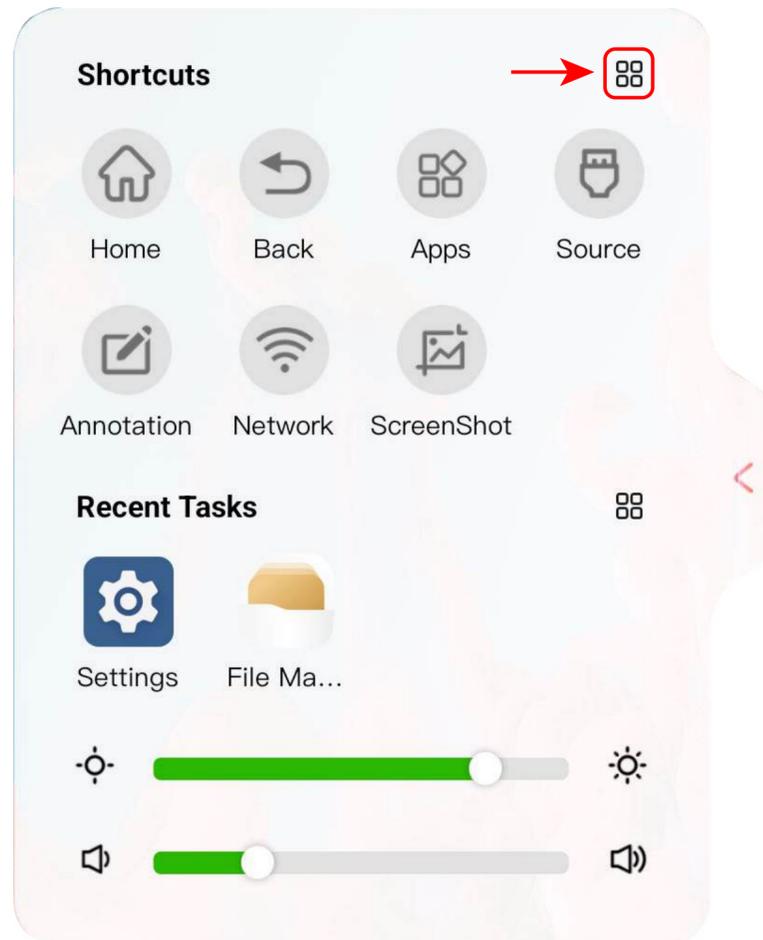



## Floating ball

The floating ball can be customized to meet the quick operation needs of users.


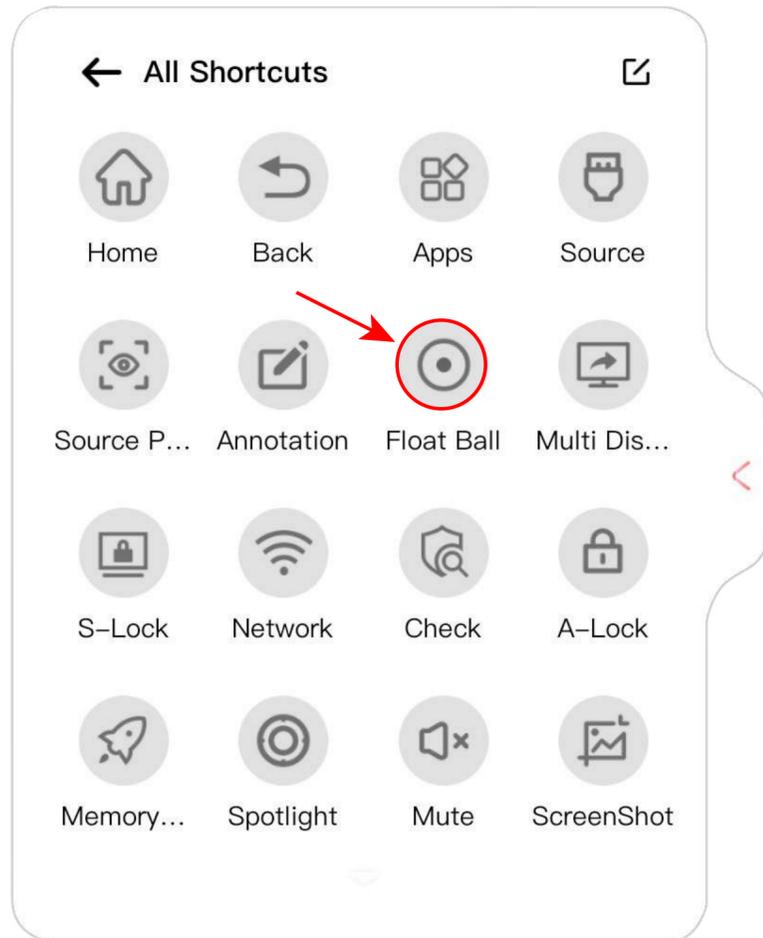


Custom definition



## Multi Display


Multi-screen expansion function: You can output the large-screen application screen to other displays through wired projection, and support up to 3 screens to display 3 different applications at the same time.

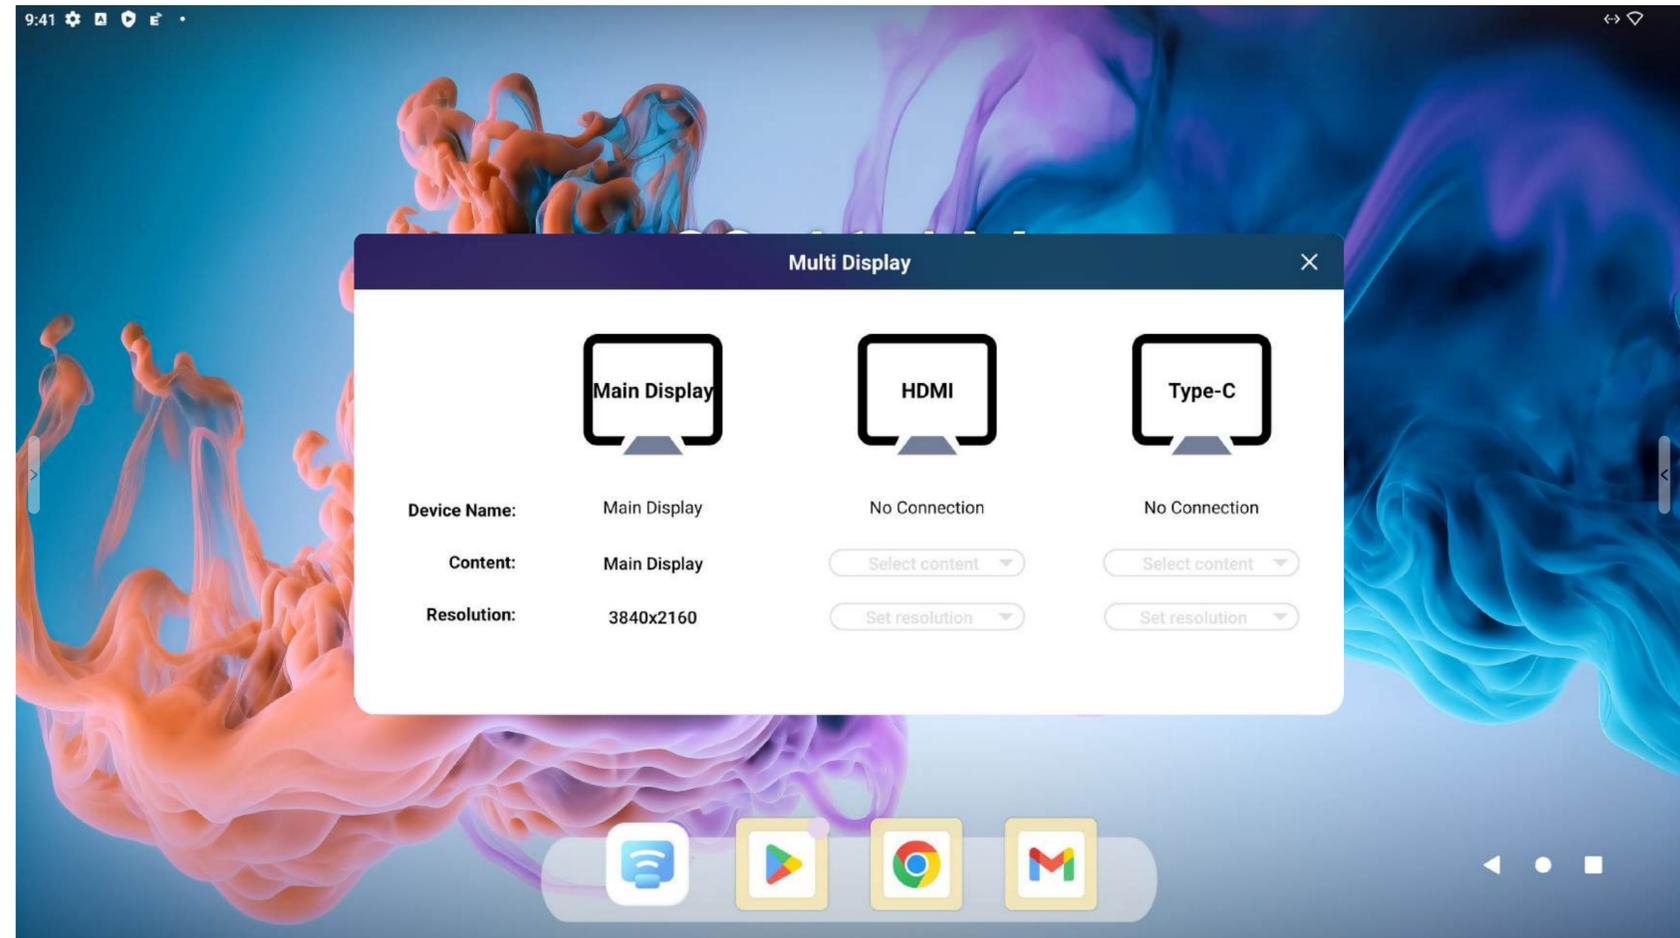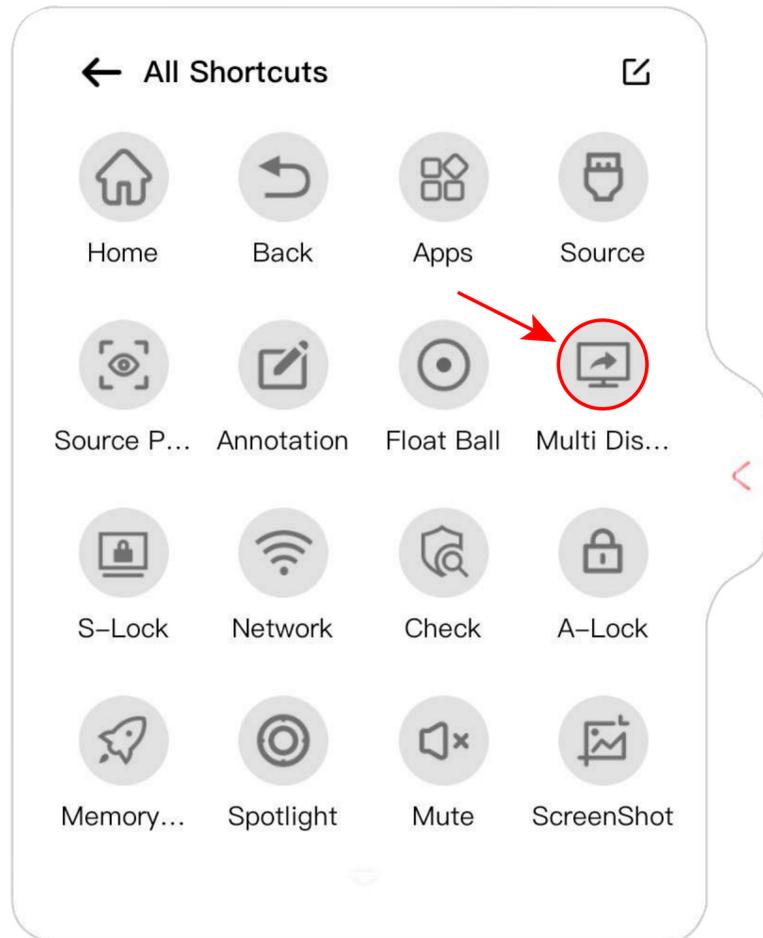



## Recent Apps

Manage background applications.


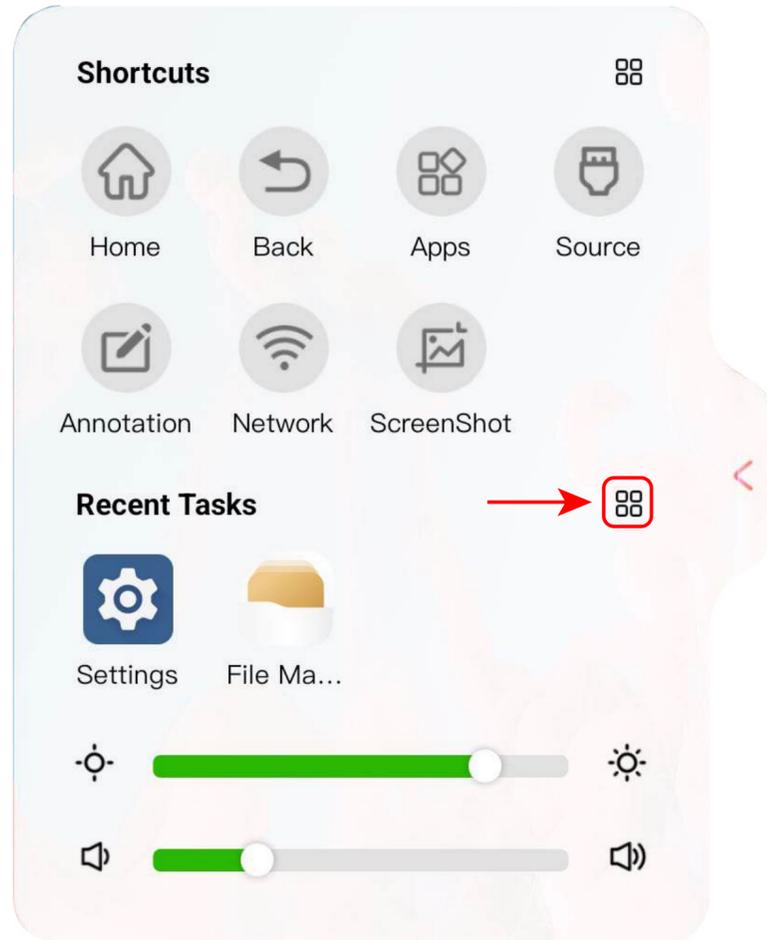




## Advanced Features

There are two home page modes to select.



“Homepage—Settings—Advanced Features—Select home page mode” normal & google home page can be set.

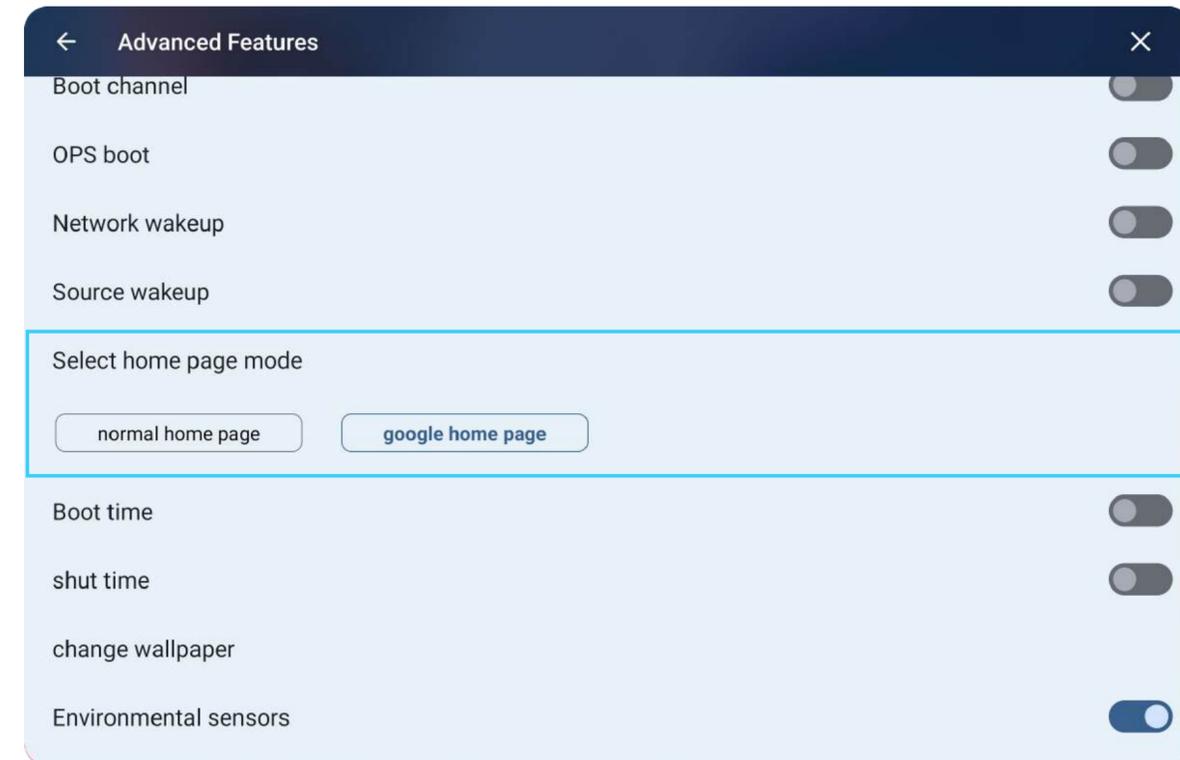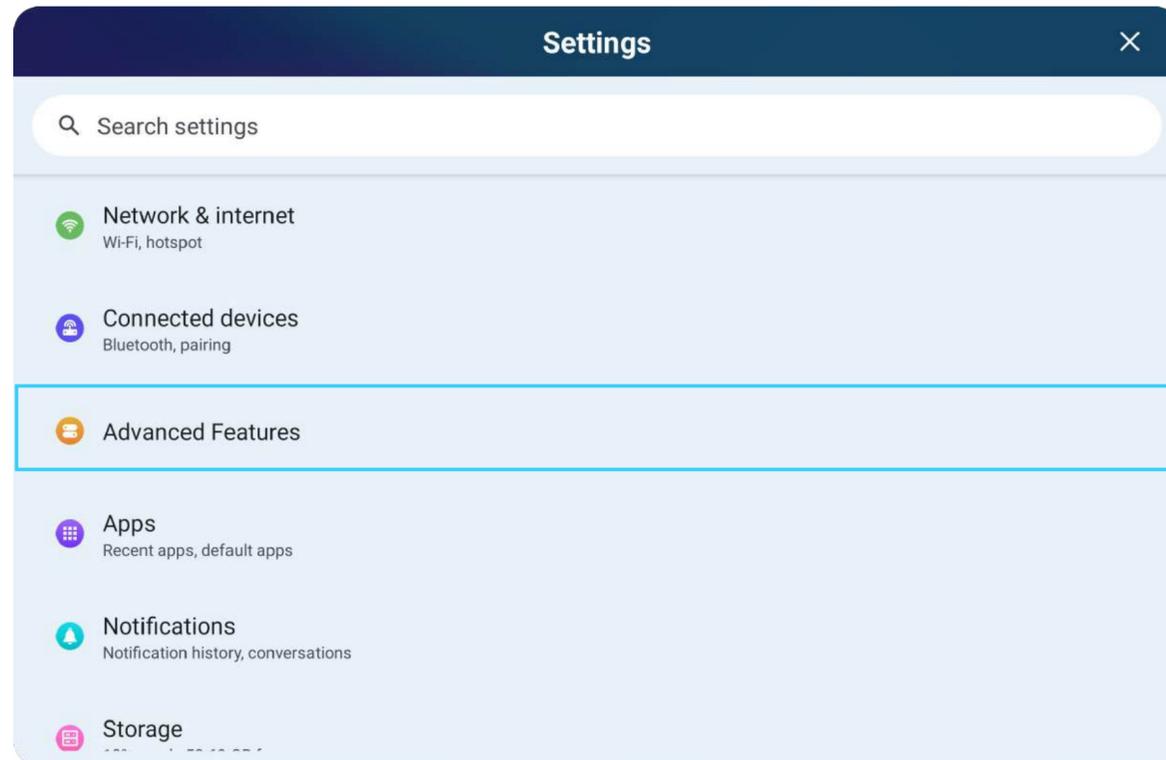



## Environmental sensors switch



Environmental sensor(including temperature and humidity sensor, PM2.5 sensor, carbon dioxide sensor): Turn on the environmental sensors switch, the relevant information will be displayed on the upper right corner of the screen.

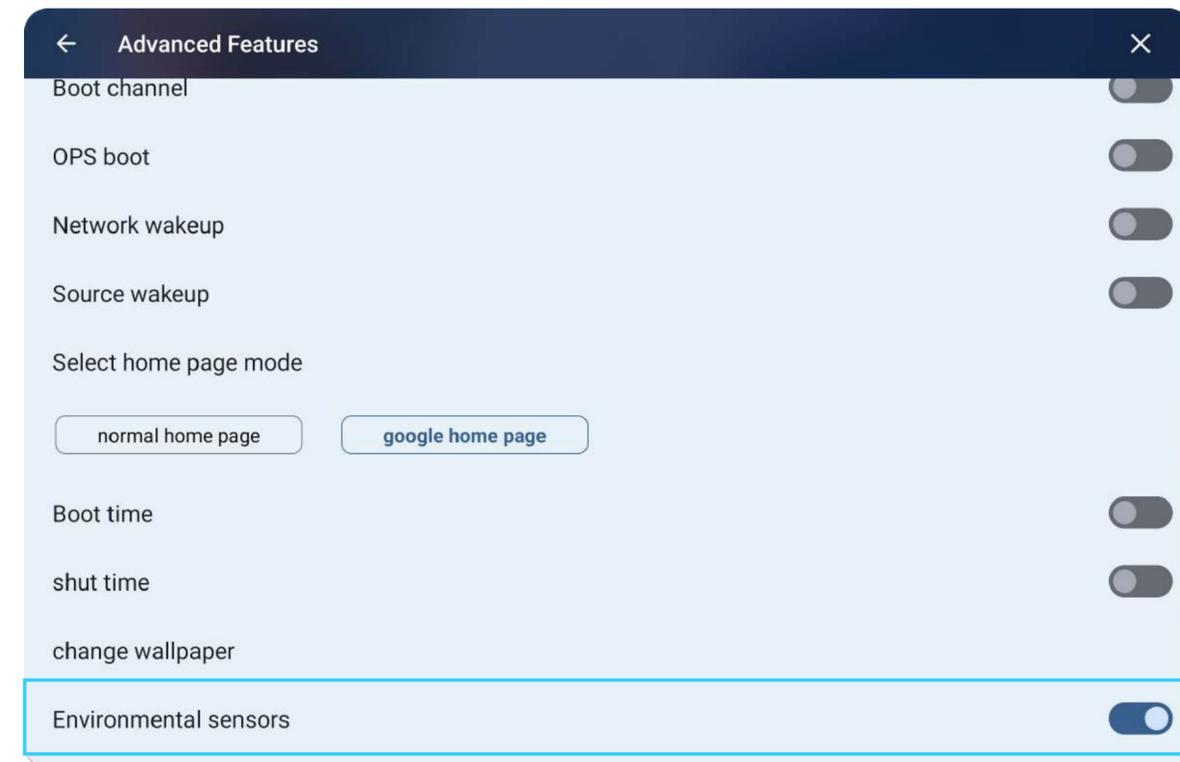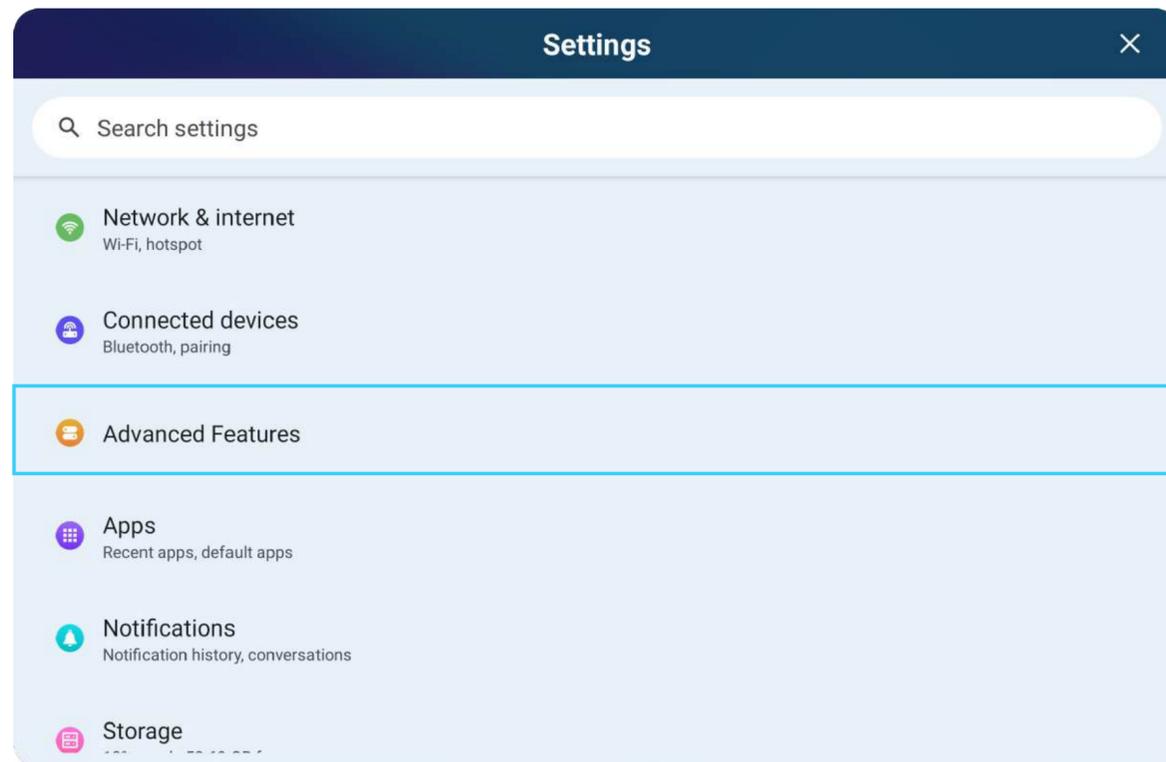



## Network settings-WiFi



“Homepage—Settings—Network—Wireless network” WiFi can be set

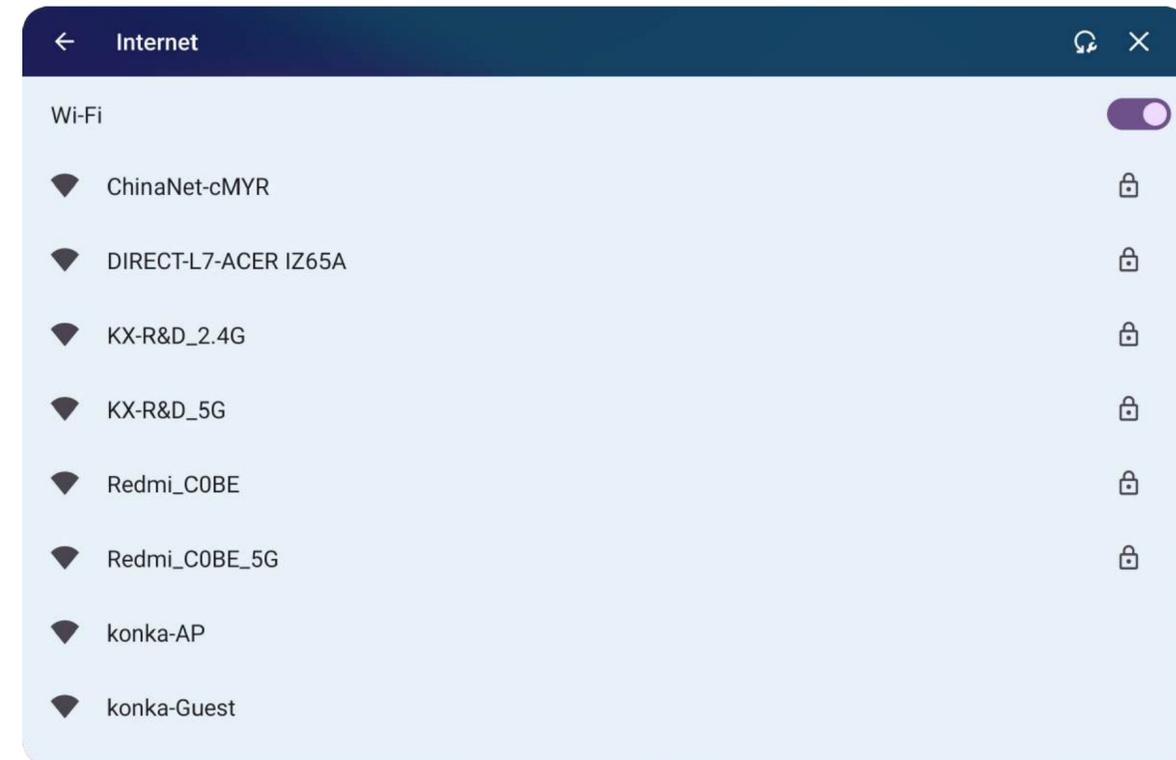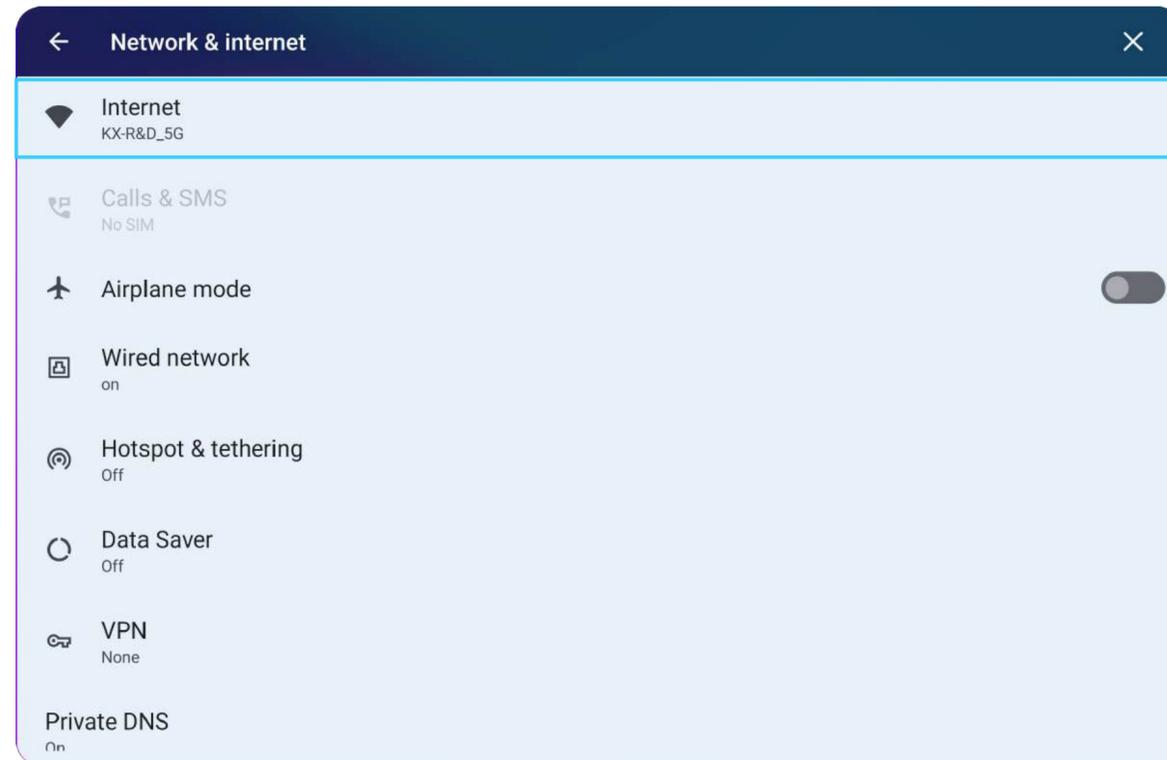



## Network settings-Wired network



“Homepage—Settings—Network—Wired network” Wired network can be set

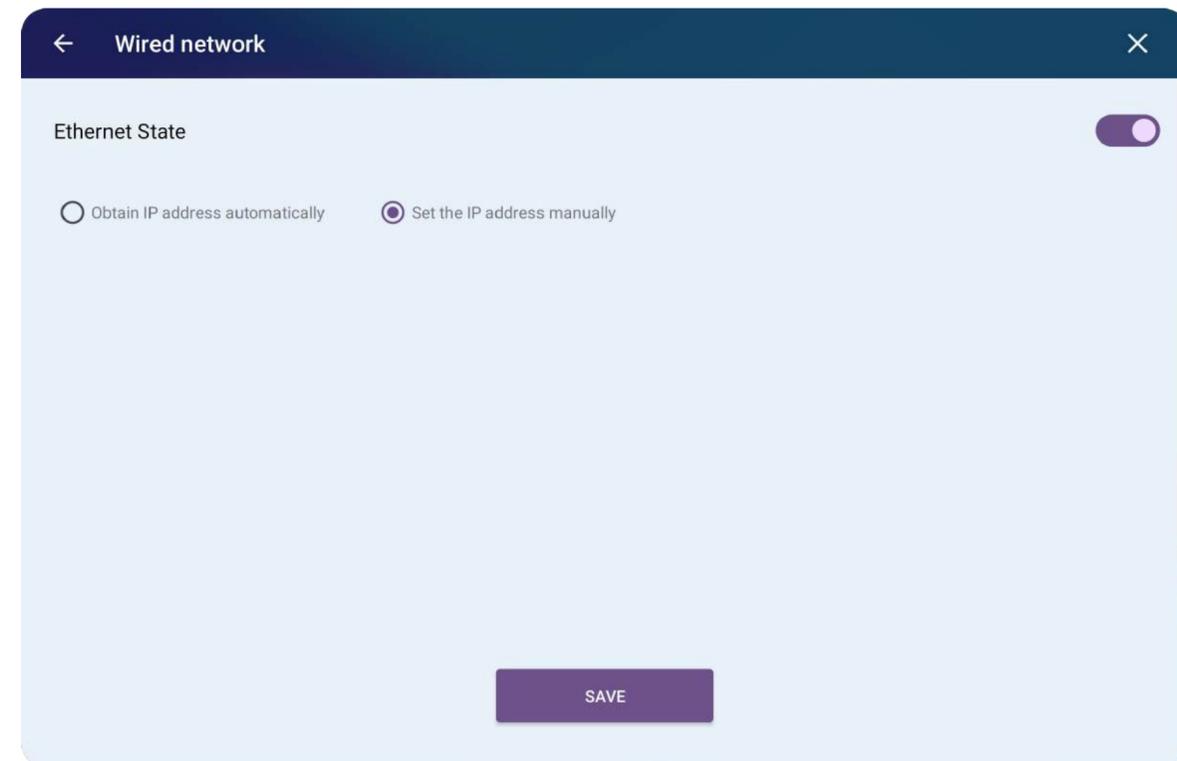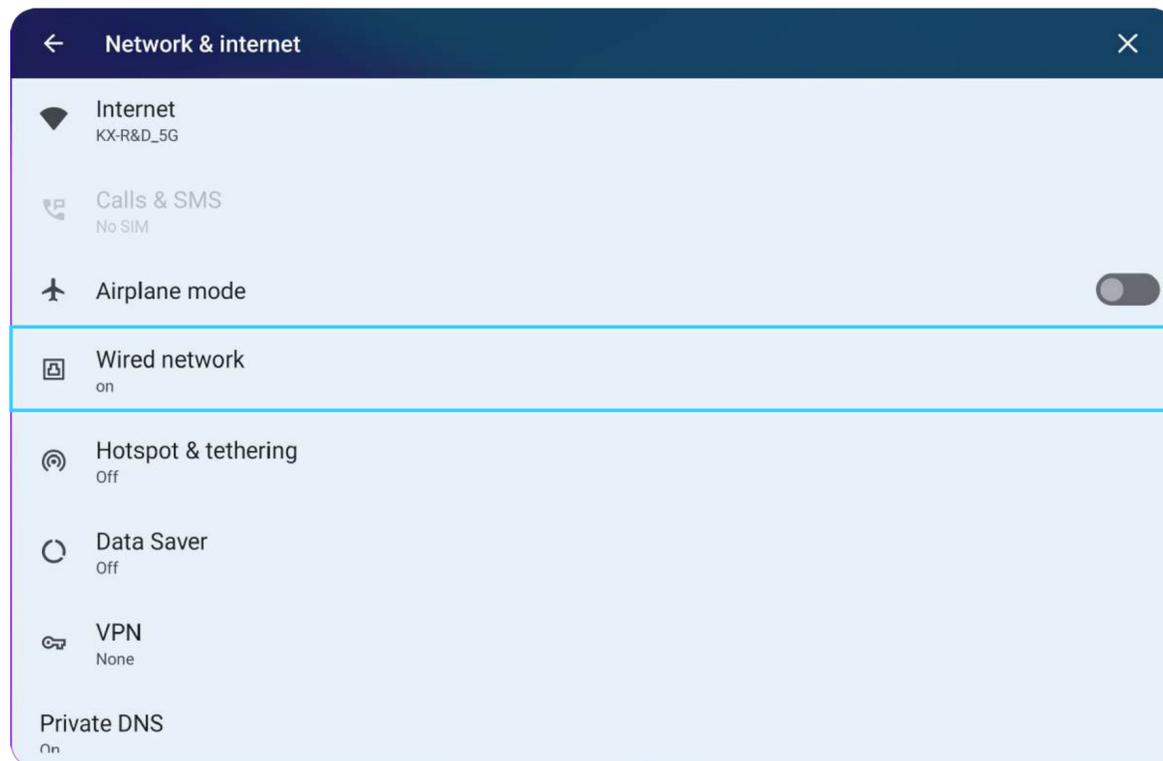



## Network settings-WiFi hotspot

“Homepage—Settings—Network—Set hotspot” WiFi hotspot can be set

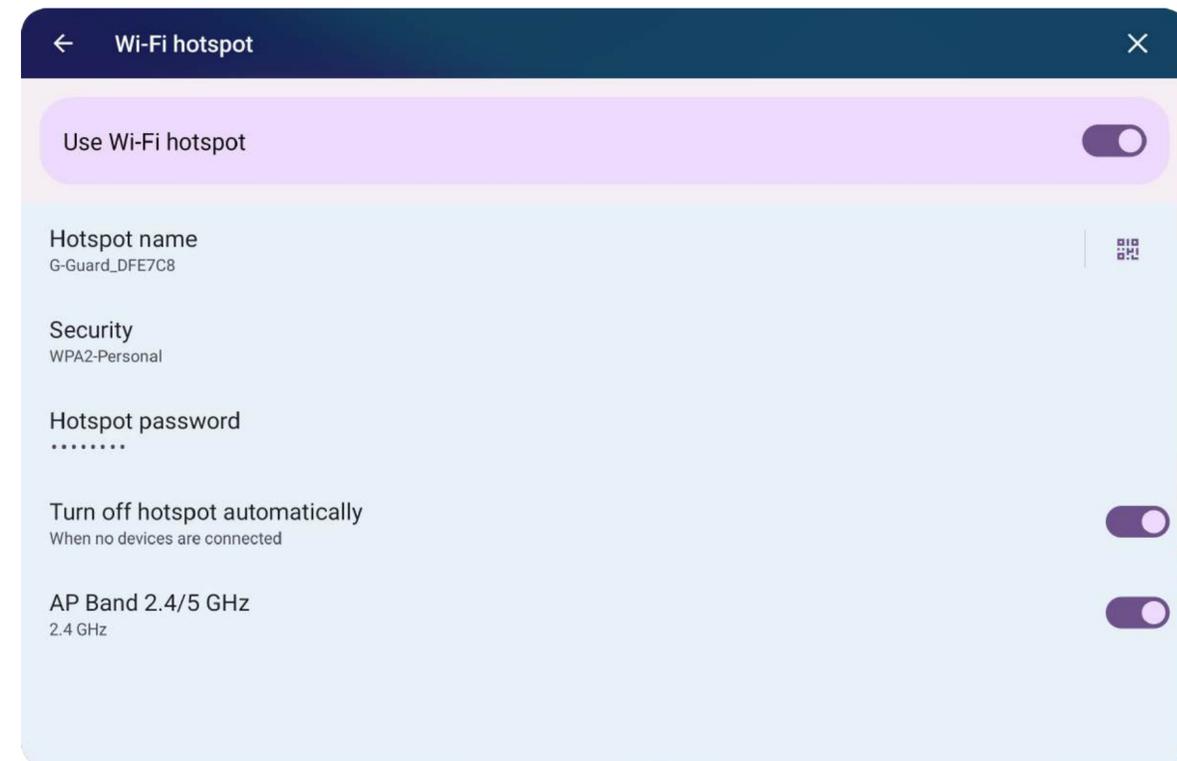
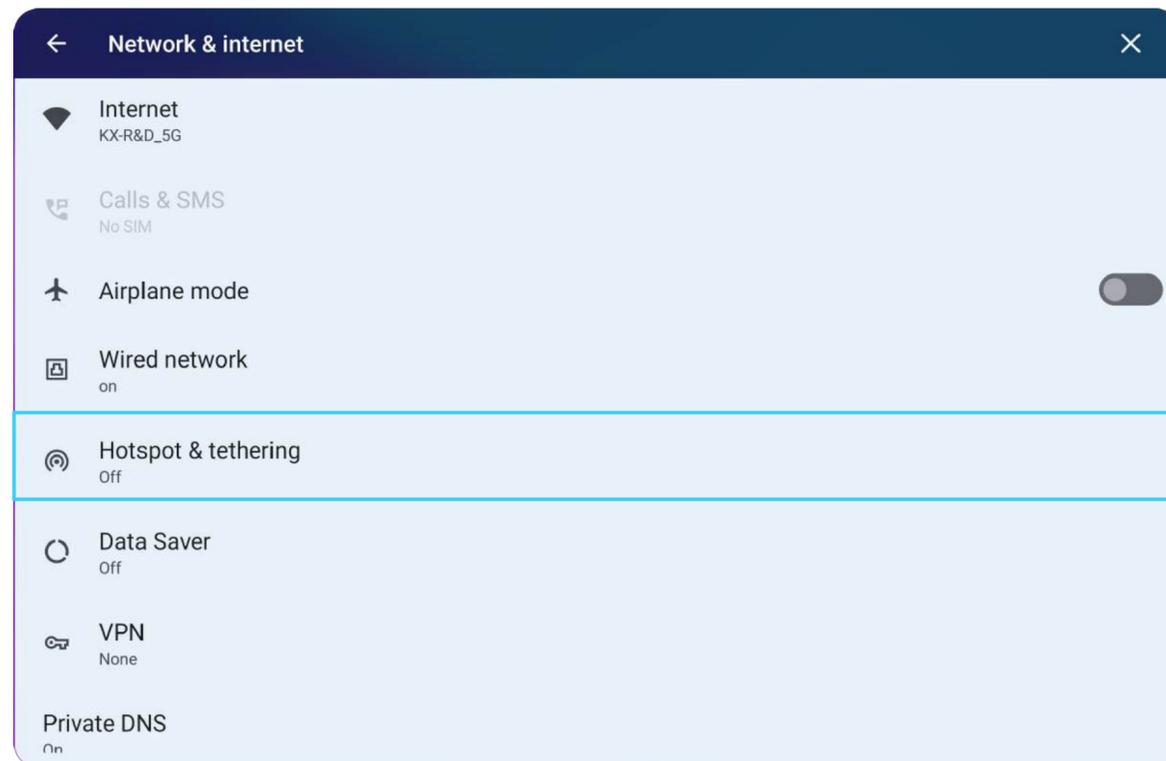




## NFC settings-Add user

Before using an NFC card, a new user account must be established first.



“Homepage—Settings—System—Multiple users-Add user” A new user account can be established.

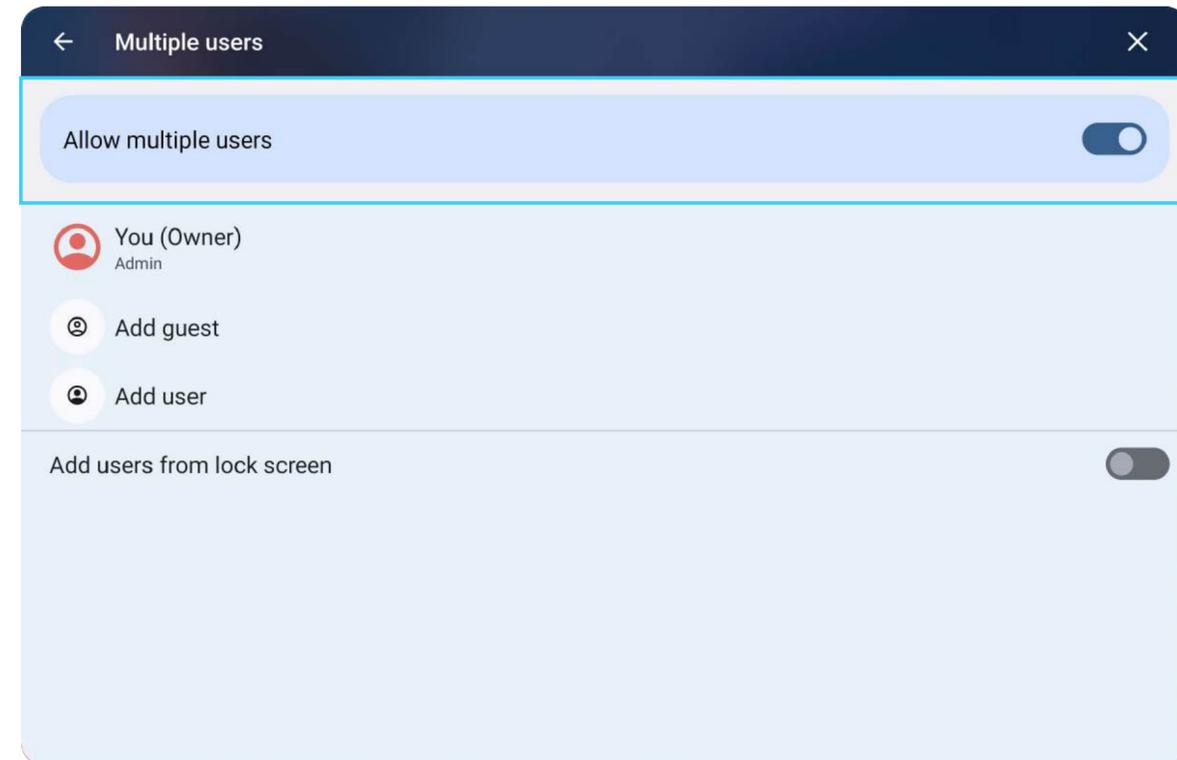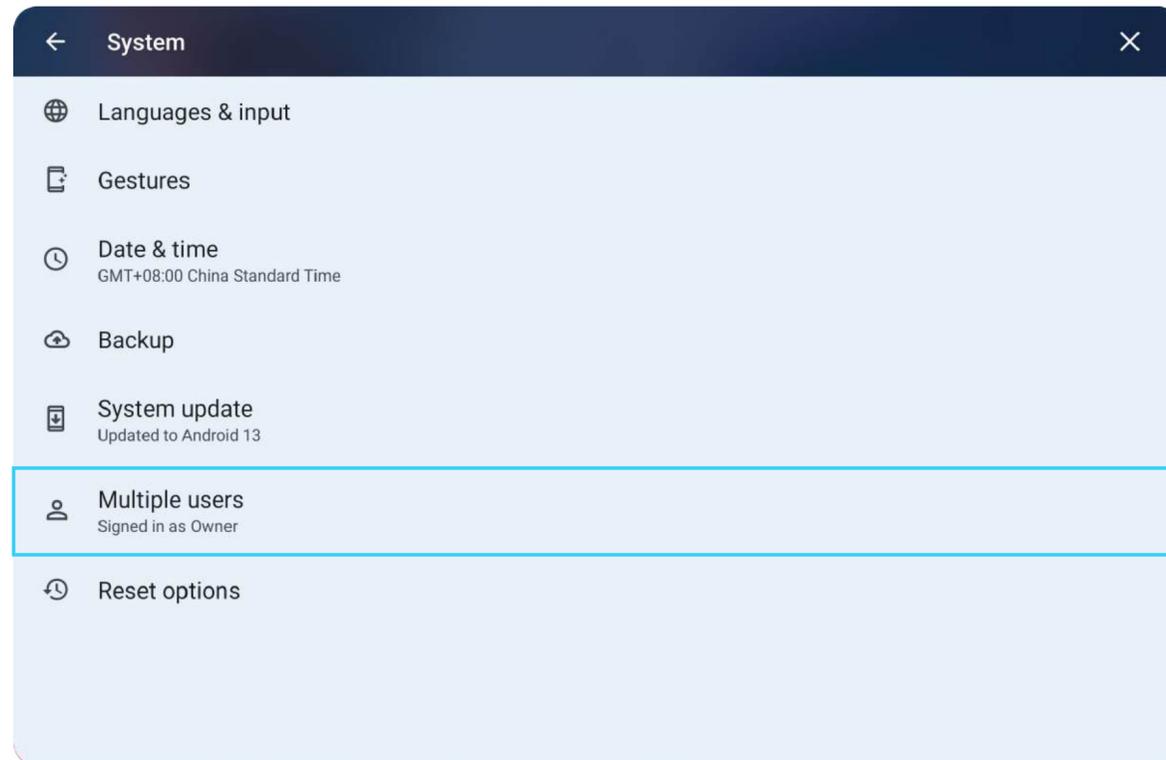



## Add NFC card

“Homepage—Settings—Connected devices—NFC” Put the NFC card close to the sensing area.

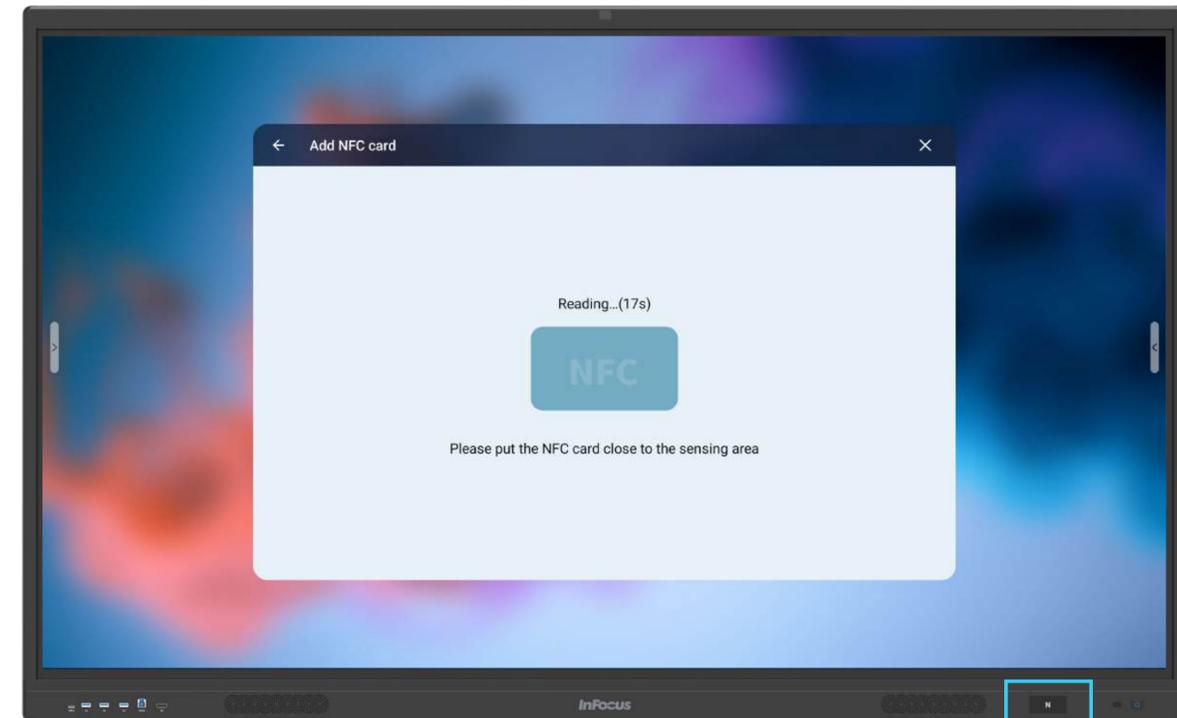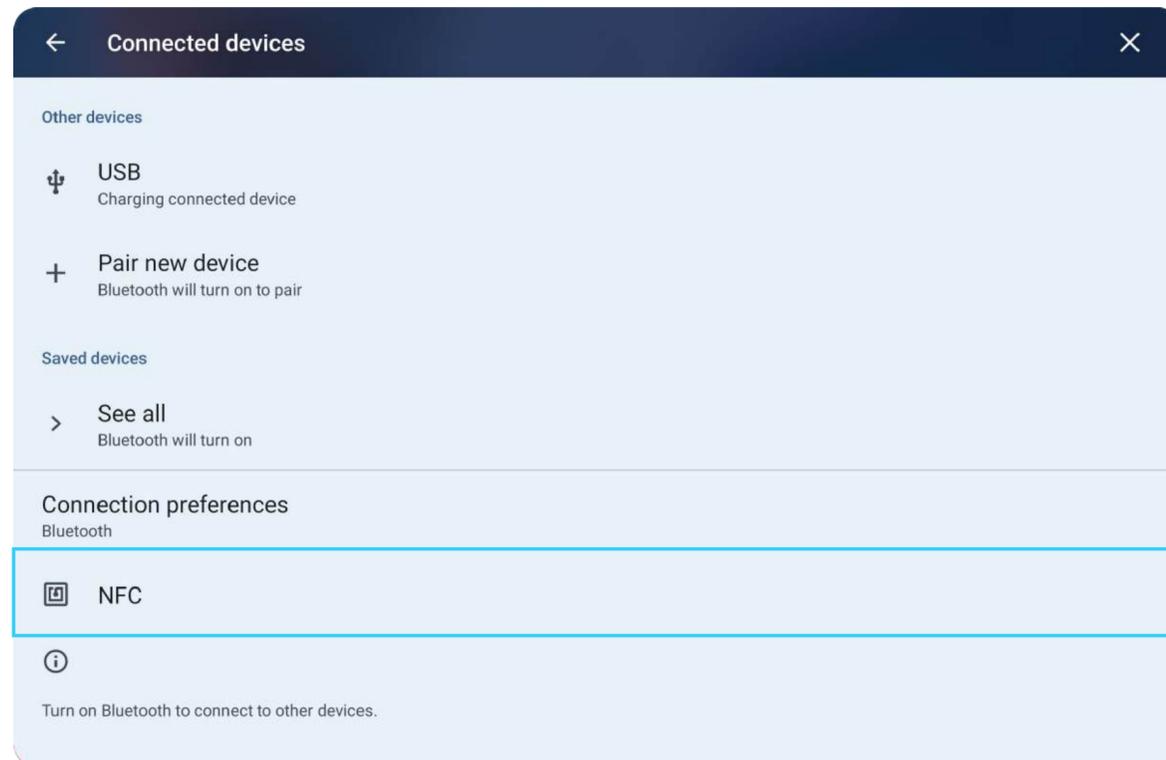

Put the NFC card close here




## Edit NFC card

After adding two NFC cards, you can see the following interface.

Select any one of the NFC cards, then you can set the identity of this NFC card.

The NFC card can unlock the user account associated with it.

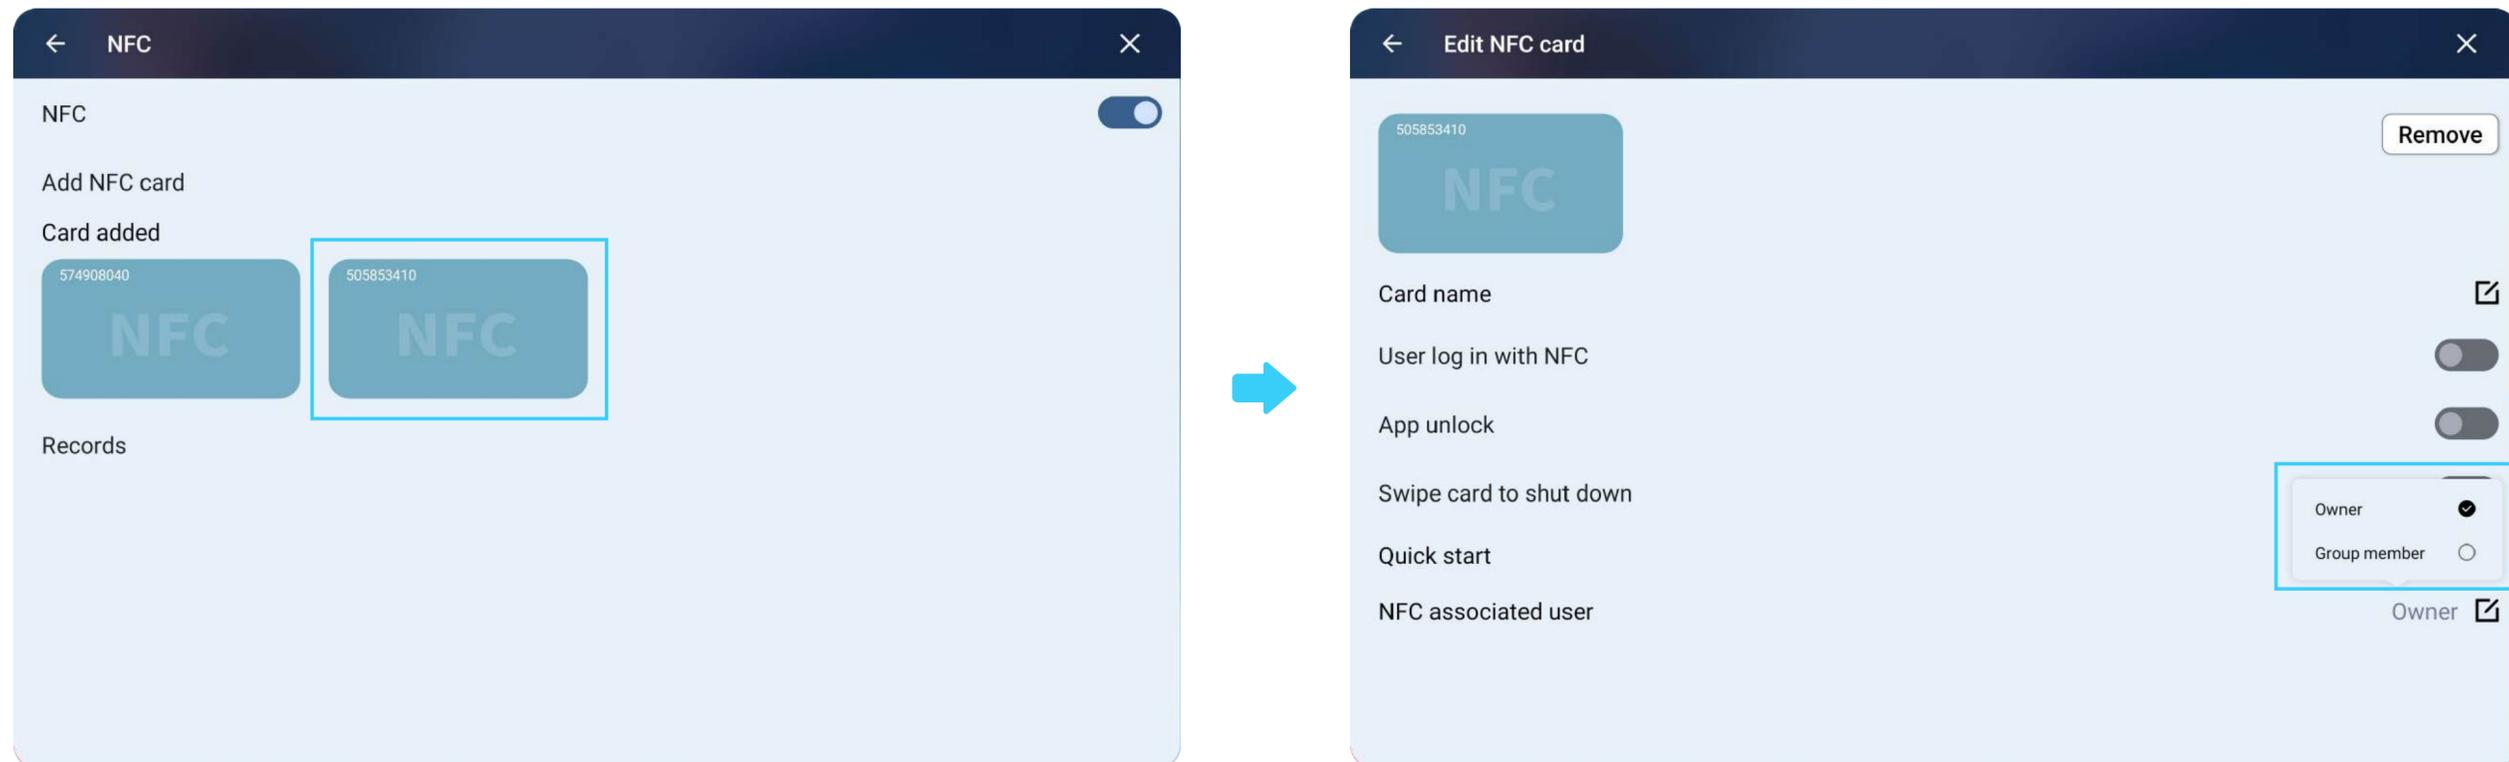



## Camera

Different gesture switching modes.



All view mode: without sound source tracing in this mode.



Speaker mode: with sound source tracing in this mode.



Meeting mode: with facial capture in this mode.

# Accessories

## Remote control

