



Important Safeguards


(For your safety, please follow the instructions below.)

Read these Important Safeguards instruction thoroughly before using your product and follow the precaution instructions carefully.

In this Instruction manual, the following symbols are shown for safe and proper use of your product and in order to alert you to the possibility of personal injury and damage to your property. The symbols and their meanings are as follows.

 Do not	Do not piping hot water alternate with cold water.
	Do not strike violently. If it is damaged, property damage, scalding and injuries are likely to occur due to water leakage.
	Do not disassemble cartridge from plastic case.
 Mandatory	Do not use liquid cleaners with acid, base content, polishing powder or steel wool for cleaning.
	Before installation, clean out dirt or other impurities which may have collected in water pipes by allowing water to flow freely for a moment.
	Should be turn the lever handle to cold water side before open water.
	Use for tap water only.





INSTALLATION MANUAL : FLOOR STANDING BATH MIXER WITH DIVERTOR AND HAND SHOWER

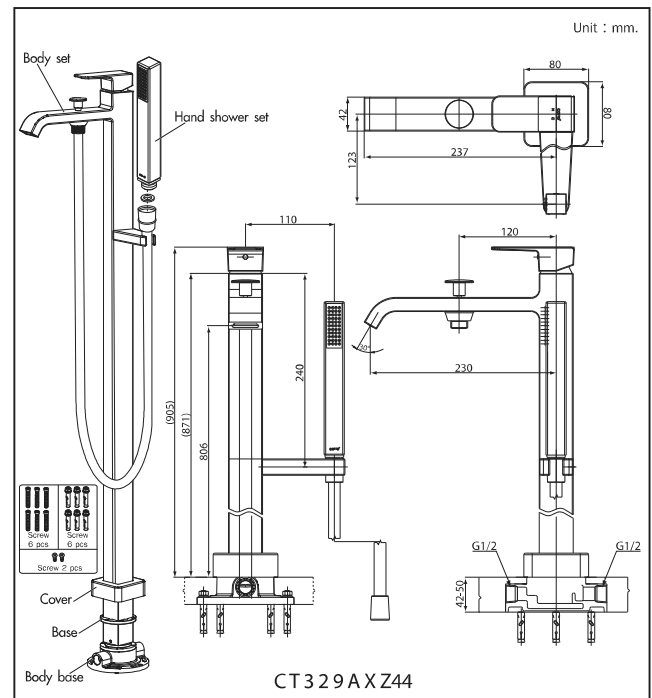

For more information, please contact
 Technical Service Section, Tel. (662) 521-7777
 THE SIAM SANITARY FITTINGS CO., LTD.
 36/11 Viphavadee Rangsit Road, Sanambin, Don Muang, Bangkok 10210 Thailand

00784

INSTALLATION MANUAL : FLOOR STANDING BATH MIXER WITH DIVERTOR AND HAND SHOWER

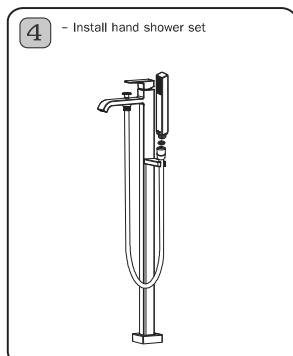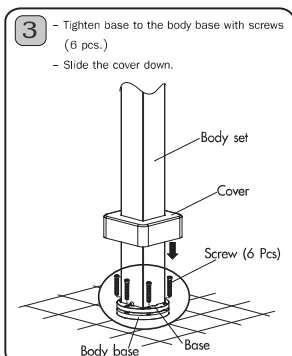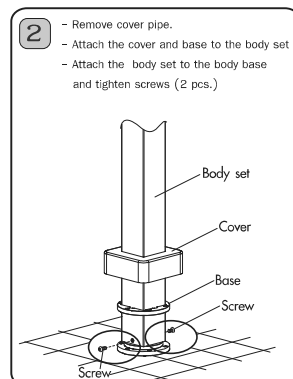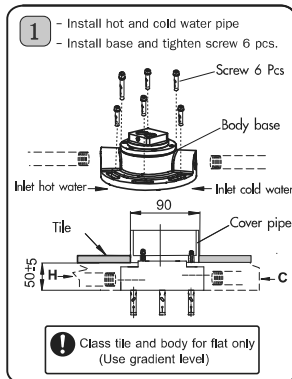

INSTALLATION MANUAL : FLOOR STANDING BATH MIXER WITH DIVERTOR AND HAND SHOWER

Care and maintenance

- Do not use toilet cleaners with acid and base content for cleaning.
- Do not use hard brush or steel wool. Soft cloth is recommended for cleaning to prevent scratch marks.
- Special metal/chromium cleaning cream is recommended.
- When tools are required to grip it. Use thick cloth to prevent scratch marks.

Troubleshooting

Problem	Solution
Little or turbulent flow.	Disassemble foaming cap and clean aerator.
Leak	Disassemble, clean cartridge and tighten cover. If the cartridge is damaged, replace new cartridge in the same position.
Lever handle is loose	Tighten screw.

Working recommendation

- Make sure that equipment and tools are in proper working condition.
- Water pressure should be between 0.05-0.75 MPa. (0.5-7.5 Kg/cm²)

For more information, please contact
 Technical Service Section, Tel. (662) 521-7777
 THE SIAM SANITARY FITTINGS CO., LTD.
 36/11 Viphavadee Rangsit Road, Sanambin, Don Muang, Bangkok 10210 Thailand

00784